



# 使用保養指南


適用型號: 8TMHW6630HW

## Use & Care Guide

Applicable model: 8TMHW6630HW

### 滾筒洗衣機

### FRONT-LOADING AUTOMATIC WASHER

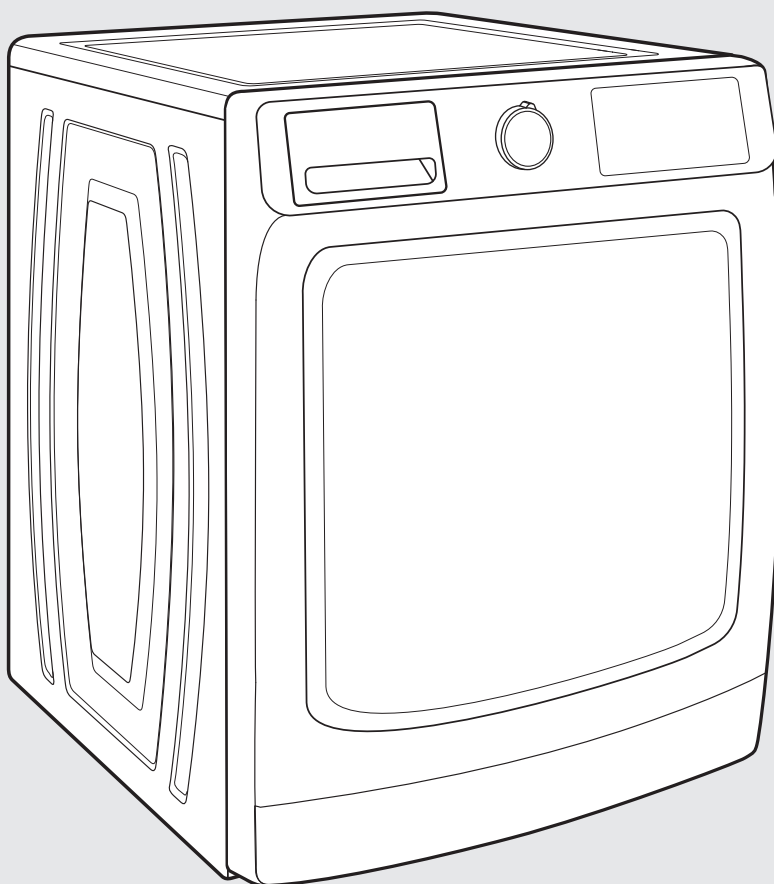

請至官網參閱更多產品相關訊息：[www.maytag.com.tw](http://www.maytag.com.tw)  
If you have any problems or questions, visit us at [www.maytag.com.tw](http://www.maytag.com.tw)



請僅使用 HE 高效能洗衣精。  
Designed to use only HE  
High Efficiency detergents.

W11411493A

# 目錄/TABLE OF CONTENTS

產品規格 .....	2	PRODUCT SPECIFICATION .....	27
使用安全 .....	3	WASHER SAFETY .....	28
適用配件 .....	4	ACCESSORIES .....	29
控制面板和功能 .....	5	CONTROL PANEL AND FEATURES .....	30
行程指南 .....	7	CYCLE GUIDE .....	32
選擇適用的洗衣精 .....	9	CHOOSING THE RIGHT DETERGENT .....	34
使用洗衣機 .....	9	USING YOUR WASHER .....	35
洗衣機保養 .....	13	WASHER MAINTENANCE .....	39
故障排除 .....	17	TROUBLESHOOTING .....	43
幫助和服務 .....	26	ASSISTANCE OR SERVICE .....	BACK COVER

## 產品規格：

機型	8TMHW6630HW
商品名稱	洗衣機
適用電源	120 V / 60 Hz
最大洗衣量(乾燥衣物)	17.0 kg
適用水壓	0.03~0.7 MPa
額定消耗電功率	1,000 W
最高旋轉速度	1,160 rpm
產品顏色說明(末碼)	W=白
重量	100 kg
外觀尺寸(高 x 寬 x 深)	982 x 686 x 837 (mm)

註：規格以實際的機身銘牌為主。

如需查詢RoHs資訊，請瀏覽官方網站: [www.maytag.com.tw](http://www.maytag.com.tw)。

## 您與他人的安全都非常重要。

本公司已在這份手冊與電器上提供許多重要的安全提示訊息，請務必一一閱讀並遵守。



這是安全警示符號。

此符號表示存在可能導致您或他人傷亡的潛在危險。

所有安全提示訊息的前方都有安全警示符號以及「危險」或「警告」字樣。分別代表：



**危險**

若不立即遵照指示，將導致您死亡或重傷。



**警告**

若不遵照指示，將導致您死亡或重傷。

所有安全提示訊息都會告訴您有哪些潛在危險、如何降低受傷機率，以及若不遵守指示會有什麼後果。

## 重要安全說明

**警告：**為了減少使用洗衣機時發生火災、觸電或人身傷害的危險，請遵守以下基本預防措施，包含下列各項：

- 使用洗衣機之前，請詳讀所有的說明。
- 本電器不預期供生理、感知、心智能力、經驗或知識不足之使用者(包含孩童)使用，除非在對其負有安全責任的人員之監督或指導下安全使用。
- 不要去洗滌那些曾經被汽油、乾洗溶劑、易燃或容易爆炸的物質所清洗過、洗滌過、浸泡過的衣物，因為它們會釋放出可能燃燒或者爆炸的氣體。
- 不要加入汽油、乾洗溶劑或其他易燃或爆炸之物質到洗衣水裏面，它們會釋放出可能燃燒或者爆炸的氣體。
- 在某些情況下，如果兩個星期或更長沒有使用的熱水系統可能會產生氫氣。氫氣是易爆炸氣體。如果熱水系統有很長一段時間未使用，在使用洗衣機之前，打開水龍頭，讓水在每個水龍頭都流出幾分鐘。這樣可以釋放掉任何聚集的氫氣。由於該氣體是易燃性的，在此時請不要吸煙或者使用火苗。
- 不要讓小孩在洗衣機上或洗衣機內玩耍。當洗衣機在小孩附近使用時，請仔細照顧小孩。
- 在停止使用或棄置洗衣機前，請將洗衣機門或上蓋拆除。
- 當洗衣槽、脫水槽或洗衣棒在轉動時，請不要將手伸入洗衣機內。
- 請不要將洗衣機安裝或存放在室外日曬雨淋之地方。
- 請勿擅自更改控制器。
- 請不要擅自修理或者更換任何洗衣機零件，除非您具有修理技能及明確理解本使用或維護指南或其他用戶維修說明書所指定的修理方法，否則請別擅自修理。
- 參閱“電源要求”章節之接地說明作好接地。
- 若電源線損壞時，必須由製造廠或其服務處或具有類似資格的人員更換以避免危險。

**請妥善保存上述安全說明**

## 適用配件：


### 安裝和保養配件

原廠認證零件 - 這代表專為此款洗衣機設計的高品質零件與配件。通過時間考驗的工程符合我們嚴格的品質規範。

### 原廠認證零件


#### 專為此款洗衣機設計的配件：

利用下列 **Maytag** 獨家配件，自訂您的新洗衣機和乾衣機。  
更多配件選擇和訂購相關資訊，請致電：**0800-258-558**，  
或參閱官網：[www.maytag.com.tw](http://www.maytag.com.tw)。

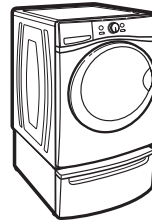

#### 15" 底座

搭配洗衣機顏色的底座，能將機器升高至更舒適的工作高度。大型抽屜可提供方便的貯存空間。

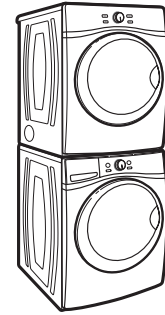

#### 堆疊配件


若有空間考量，堆疊配件可讓您把乾衣機安裝在洗衣機的上方。

# 控制面板和功能

並非所有機種都帶有所有功能和行程。

## 備註：

- 控制面板配備觸控介面，能支援以手指觸控進行設定。為確保設定成功，請用指尖按壓控制面板，而不是手指甲。選擇設定或選項時，只要輕觸其名稱即可。
- 行程完成後，您所選擇的設定將被自動記錄，供您下次使用。然而，若洗衣機電源中斷，下次開機時將恢復出廠預設值。

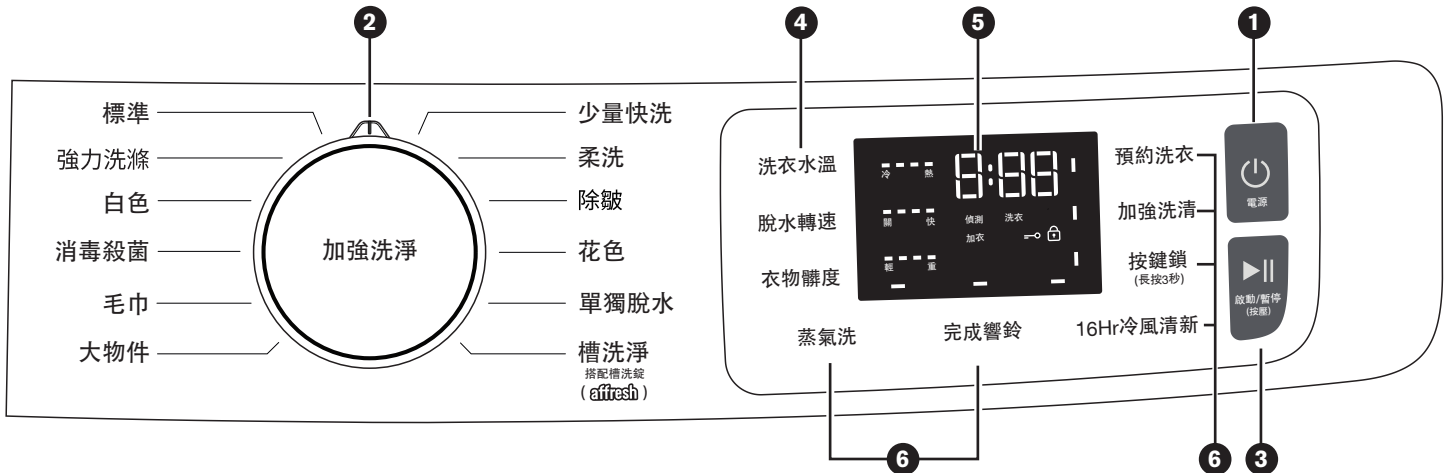

### 1 電源開關

點選以開啟和關閉洗衣機。點選以隨時停止/取消特定行程。  
**備註：**轉動洗衣行程旋鈕也能開啟洗衣機。

### 2 洗衣行程旋鈕

轉動旋鈕，為您的衣物選擇行程。按下洗衣行程旋鈕，啟用「加強洗淨」功能。  
**備註：**當您使用了30次洗衣行程後，槽洗淨指示燈會閃爍，以提醒您使用該行程清洗內桶。  
請參閱「行程指南」中各洗衣行程之詳細說明。

**備註：**為達到「隔夜清洗與烘乾」行程的最佳成果，清洗重達或未滿 0.9 kg 的衣物時，例如：足球制服、慢跑褲或短褲，請讓行程運行 12 小時。

### 加強洗淨

可使用「加強洗淨」選項來加強清潔力。按下「洗衣行程旋鈕」，啟動「加強洗淨」選項，以在主洗程前以冷水進行預洗。此功能啟動後，「洗衣行程旋鈕」將亮起，而顯示畫面的預計剩餘時間將增加。若您使用的是搭配單次用洗劑盒的機型，在使用此功能時，可以在漂白/洗劑盒內多加一份洗劑用量，以達到最佳清洗效果。

### 3 啟動

按壓按鈕3秒直到洗衣機啟動且按鍵上方的顯示燈號亮起，在行程中按壓一次按鈕即可暫停行程。在「添加衣物」燈號亮起時，可在行程進行中添加衣物。

### 4 LED顯示燈和設定

選擇行程時，預設設定將亮起並顯示「預計剩餘時間」。衣物量、洗衣溫度和水壓等因素都可能影響顯示的時間長短。衣物塞太滿、放置不平均或過多泡沫都可能讓洗衣機延長行程時間。  
點選您想要的設定，以調整時間。欲知每個行程的適用設定，請參閱「行程指南」。並非所有行程都對應相同的設定選項。

### 洗衣水溫

已預設每個行程的建議洗衣溫度。您也可以根據布料和污垢類型來選擇洗衣溫度。為取得最佳成果，根據衣物標籤說明，使用最適當的洗衣溫度。所有洗衣溫度都帶有冷水洗滌功能。

### 脫水轉速

本洗衣機會根據不同洗衣行程自動選擇轉速。某些預設值可被變更。

■ 轉速較快可縮短烘乾時間，但可能會讓衣物較皺。

■ 轉速較慢可减少衣物皺痕，但衣物會較濕。

### 衣物髒度

已預設每個行程的「衣物髒度」(洗衣時間)。變更髒度設定，將增加或減少「預計行程時間」顯示的行程時間。  
針對大部份衣物，已預設您選用的行程的衣物髒度。若為極髒污的堅固布料，使用「衣物髒度」設定，選擇較高的髒度。若為髒污程度不高的精緻布料，使用「衣物髒度」設定，選擇較低的髒度。較低髒度設定有助減少纏繞和皺褶。

### 5 行程狀態指示燈

**備註：**並非所有機種都提供「行程狀態指示燈」。

「行程狀態指示燈」顯示行程進度。在行程的每個階段，您能注意到相異於一般洗衣機的聲音訊號和暫停設定。



## 偵測

按壓「開始」後，洗衣機會先自行測試門鎖機制，接著感應燈會亮起。您會聽到一聲喀嗒聲，滾筒將局部轉動，然後門會發出一聲喀嗒聲，快速解鎖。門會再次發出一聲喀嗒聲以上鎖。門第二次上鎖後，洗衣機將開始轉動並偵測衣物量。此偵測動作將於行程中持續進行。同時，您可能也會聽到水流過洗劑盒以添加洗劑至衣物的聲音。

偵測衣物量後，根據此重量推估的預計洗衣時間將顯示在螢幕上。實際行程時間也許會延長。然而，顯示畫面將持續顯示預計的時間。

感測指示燈在行程運行的某些期間內會每秒閃爍一次，例如：當洗衣機正在減少過多泡沫時。

## 洗衣

洗衣行程期間，將顯示洗衣，讓您瞭解正在進行的洗程。

## 加衣

「加衣」指示燈亮起時，您可暫停洗衣機，開門放進更多衣物。觸碰並按住「啟動」，啟動洗衣機。

## 洗衣劑量低

若洗劑盒內的洗衣劑量低，此訊息將顯示在螢幕上。

## 6 功能選項

按壓以啟動更多洗衣選項，或洗衣機的額外功能。並非所有機種都提供所有選項。

### A 預約洗衣

按壓此選項，可預約洗衣最長至 12 小時後。

### B 冷風清新

冷風清新將於行程結束後定時滾動衣物最長至 16 小時，而整合式風扇將循環洗衣機內的空氣，減少濕氣。觸碰可啟動冷風清新。然而，開啟冷風清新選項後，未來所有行程都配備此功能，直到把它關閉為止。洗衣機會記住最後一次的開啟/關閉狀態設定。觸碰可關閉冷風清新選項。


洗衣機運行時欲關閉冷風清新選項，請按壓「電源」。

**備註：**啟用冷風清新選項時，機門將上鎖。欲取消選項並解鎖機門，請按壓「電源」。

## 7 洗劑盒

### 單次用洗劑盒(部分機種)

洗劑盒讓您便於在適當的時間點，添加 HE 洗衣精、液氯漂白劑和衣物柔軟劑至清洗衣物。參閱「選擇適用的洗劑」，瞭解使用洗劑盒的資訊。

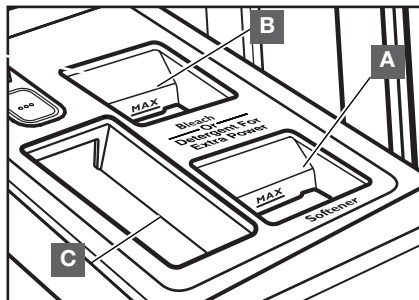

### C 蒸氣

「蒸氣」選項在許多行程內增加額外的浸泡和洗衣時間，以清除頑強污漬，並以蒸氣增加洗淨力。內建加熱器能幫助維持最佳洗衣溫度。

### D 加強洗清

啟動此選項可針對大部分洗程增加洗清功能。

### E 完成響鈴

按壓「完成響鈴」約 3 秒，顯示畫面將以「3」、「2」、「1」的方式倒數計時。顯示畫面將開始顯示音量，您將看到「1」、「2」、「3」，然後是「關閉」。鬆開「完成響鈴」後，顯示的最後一個數值將是目前的選擇。

### F 控制鎖

按壓 3 秒，鎖定所有控制選項，避免不想要的變更或運作。再按壓 3 秒以解鎖。按住「控制鎖」的時候，顯示將倒數計時 1 秒，您將看到「3」、「2」，然後是「1」。您仍可點選「啟動」，暫停行程，或點選「電源開關」，以關閉洗衣機。

### G 加強洗淨

「加強洗淨」功能在洗衣行程內的不同洗衣階段，以結合冷水和熱水來達到最適洗衣溫度的方式來提升去污力。欲使用此功能，按下旋鈕啟動「加強洗淨」。針對單次用洗劑盒，在標示為「加強洗淨」的洗劑盒內，按製造商的建議量再額外增加 1/2 的劑量。

### A 衣物柔軟劑投放格

於行程最適時間點，自動稀釋和投放衣物柔軟劑。

■ 此洗劑盒僅可放入液態的衣物柔軟劑。

### B 液氯漂白劑投放格

在洗衣行程後的第一次洗清時，於行程最適時間點，自動稀釋和分配液氯漂白劑。此投放格無法稀釋漂白粉。單次用洗劑盒機種使用「加強洗淨」功能時，用此投放格添加額外的洗劑量。

### C 液體高效能 HE 洗衣精投放格

此投放格用來存放主洗程使用的 HE 洗衣精或洗衣粉。


# 行程指南


以**粗體字**顯示的設定和選項，是該行程的預設設定。為達成保護衣物的最佳效果，選擇最適用於需要清洗之衣物的行程、選項和設定。並非每個行程都提供所有設定，且部份選項無法合併使用。

並非所有機型都適用所有行程和選項。


## 衣物量建議

為取得最佳成果，請遵循每個行程的衣物量建議。

 **少量衣物**：置入洗衣機滾筒內的量不超過 1/4，約 3-4 件衣服。

 **大量衣物**：置入洗衣機滾筒內的量最多約 3/4。

 **中量衣物**：置入洗衣機滾筒內的量最多約 1/2。

 **超大量衣物**：填滿洗衣機滾筒，但仍留有衣物滾動空間。為取得最佳成果，請避免衣物塞滿滾筒。

使用預設行程 清洗衣物：	行程：	洗衣溫度*	轉速***	髒汙程度：	功能/選項調整：	行程說明：
一般髒污程度的棉質、亞麻布、床單和混合衣物	標準	冷 涼 <b>溫</b> 溫熱 熱	不脫水 中速 中高速 <b>高速</b>	輕 <b>中等</b> 中強 強	蒸氣** 加強洗清 冷風清新 加強洗淨	 本行程結合中速滾動和超高速脫水。本行程旨在提供最佳能源效率。
不易褪色布料和極髒污衣物	厚重/衣量多	冷 涼 <b>溫</b> 溫熱 熱	不脫水 低速 中速 中高速 <b>高速</b>	輕 中等 中強 <b>強</b>	蒸氣** 加強洗清 冷風清新 加強洗淨	 高速滾動和超快速最後脫水，有助提升洗衣效果並減少烘乾時間。
極髒污的白色布料和衣物	白色衣物	冷 涼 <b>溫</b> 溫熱 熱	不脫水 低速 中速 中高速 <b>高速</b>	輕 中等 中強 <b>強</b>	蒸氣** 加強洗清 冷風清新 加強洗淨	 使用漂白劑時，加長洗衣時間和快速滾動、加強洗清和超高速脫水，以提升洗衣和洗清效能。
耐洗的毛巾和抹布	毛巾	冷 涼 <b>溫</b> 溫熱 熱	不脫水 低速 中速 中高速 <b>高速</b>	輕 中等 中強 <b>強</b>	蒸氣** 加強洗清 冷風清新 加強洗淨	 提供快速滾動、較長洗衣時間、正常洗清、超高速脫水，以縮短烘乾時間。
大型物品，例如：睡袋、小棉被、夾克	大物件	冷 涼 <b>溫</b> 溫熱 熱	不脫水 低速 中速 中高速 <b>高速</b>	輕 中等 中強 <b>強</b>	蒸氣** 加強洗清 冷風清新 加強洗淨	 用此行程清洗大物品，例如：夾克和小棉被。洗衣機會注滿水，以浸泡衣物，然後再開始洗程運作。請避免完全塞滿滾筒。
2-4 件少量略髒衣物	少量快洗	冷 涼 <b>溫</b> 溫熱 熱	不脫水 低速 中速 中高速 <b>高速</b>	輕 中等 中強 <b>強</b>	蒸氣** 加強洗清 冷風清新 加強洗淨	 適用少量衣物(2-4件)。本行程結合快速滾動，以縮短洗衣時間、超高速脫水，以減少風乾時間。

續後頁

\* 所有溫度都帶有冷水洗清功能。

\*\* 僅於選擇「溫」、「溫熱」或「熱」溫度後，才能選擇「蒸氣」選項。

\*\*\* 轉速視機種而有所不同。

使用預設行程清洗衣物：	行程：	洗衣溫度*	轉速***	髒汙程度：	功能/選項調整：	行程說明：
薄紗、貼身衣物、毛衣、微髒襯衫、女性襯衫、長褲、休閒褲和裙子	柔洗	冷 涼 溫 溫熱 熱	不脫水 低速 中速 中高速 高速	輕 中等 中強 強	蒸氣** 加強洗清 冷風清新 加強洗淨	 本行程結合低速滾動和低速脫水，以維護精緻布料和減少衣服皺痕。
微髒襯衫、女性襯衫、長褲、休閒褲和洋裝	免燙	冷 涼 溫 溫熱 熱	不脫水 低速 中速 中高速 高速	輕 中等 中強 強	蒸氣** 加強洗清 冷風清新 加強洗淨	 本行程結合低速滾動和中速脫水，以維護精緻布料和減少衣服皺痕。
衣服、床具和需要消毒的毛巾	消毒殺菌	熱	不脫水 低速 中速 中高速 高速	輕 中等 中強 強	蒸氣** 加強洗清 冷風清新 加強洗淨	 本行程可除去衣服、床單和毛巾 99.99% 的大部份常見細菌。高洗衣溫度確保能消毒。請參閱衣物洗標建議的洗衣溫度。經測試的細菌包括：肺炎克雷伯菌、銅綠假單胞菌和金黃色葡萄球菌。
亮色或深色棉質、亞麻、休閒和混合衣物	花色	冷	不脫水 中速 中高速 高速	輕 中等 中強 強	加強洗清 冷風清新 加強洗淨	 冷水加額外的洗衣動作，能輕輕帶走污垢，同時維護布料。設定可被調整，但必須僅使用冷水設定。
濕衣物	單獨脫水	不適用	不脫水 低速 中速 中高速 高速	不適用	加強洗清 冷風清新	 使用單獨脫水去除衣物的多餘水份。可將轉速設定為較低速。
洗衣機內沒有衣物	槽洗淨 (搭配 affresh 槽洗錠)	不適用	不適用	不適用	不適用	每 30 次洗衣後用此行程一次，保護洗衣機內部清新和清潔。此行程使用較高水位。搭配使用 affresh 槽洗錠或液氯漂白劑，徹底清潔洗衣機的內部。不得中斷此行程。請參閱「洗衣機保養」。 <b>重要事項：</b> 槽洗淨行程期間，不得把衣物或其他物品放在洗衣機內。使用此行程時請淨空洗衣槽。請參閱「洗衣機維護」內的「洗衣機保養」。

\* 所有溫度都帶有冷水洗清功能。

\*\* 僅於選擇「溫」、「溫熱」或「熱」溫度後，才能選擇「蒸氣」選項。

\*\*\* 轉速視機種而有所不同。



## 選擇適用的洗衣精

僅可使用「高效能」洗衣精。包裝將標示「HE」或「高效能」。低水量洗衣時若使用非 HE 洗衣精，將產生多餘的泡沫。使用非 HE 洗衣精也可能導致較長的行程時間、降低沖洗效能。此舉也可能導致組件故障，而且長久以來積聚黴菌或發霉。HE 洗衣精具有低泡沫與快速擴散的特點，因此能產生適當的泡沫量並帶來最佳清潔效能。此等洗衣精能讓污垢分離，使之不會再度沉澱在乾淨的衣物上。並非所有標示為「高效能」的洗衣精都內含相同配方，且泡沫產生量也有所不同。例如：天然、有機或自製 HE 洗衣精可能會產生大量泡沫。若您使用上述其中一種產品，並看到顯示畫面上出現「Sd」或「Sud」錯誤碼，考慮使用不同的 HE 洗衣精。請遵循洗衣精製造商的說明來決定洗衣精的用量。倒入量不得超越洗劑盒的「Max」線。



僅使用「高效能」(HE) 洗衣精。

## 關於洗衣精用量：

如果清潔效果不如預期，請增加洗衣精用量。如果泡沫過多，請減少洗衣精用量。

### 備註：

- 洗劑盒也許會殘留之前洗衣行程的少量水。這是正常現象。
- 欲添加洗衣膠囊和氧系漂白劑，請參閱「使用洗衣機」章節。

## 使用洗衣機

**警告**



### 火災危險

請勿將沾過汽油或其他可燃液體的物品放進洗衣機。

任何洗衣機都無法完全清潔油污。


不得烘乾曾沾有任何油品的物品（包括烹調用油）。

否則可能導致死亡、爆炸或失火。

## 初次使用本洗衣機

首次洗衣前，將 HE 洗衣精或洗衣粉加至洗劑盒內。選擇「少量快洗」行程，在沒有衣物的情況下運行一次。僅使用 HE 洗衣精。此初次行程旨在確保洗衣機內部清潔，且洗劑盒已準備好用於首次洗衣。

## 1. 分類並準備好您需要清洗的衣物

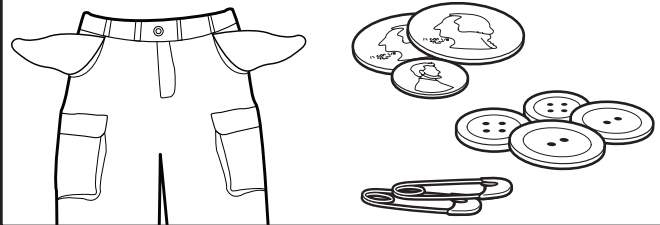

按建議行程、水溫和褪色程度分類衣物。分開髒污和微髒衣物。分開精緻衣物和堅固布料。在布料內裡部位測試去污產品，即時處理污漬，並檢查褪色程度。

### 重要事項：

- 清空衣服的口袋。零錢、鈕釦或任何小物件都可能堵塞幫浦，以致於需要致電維修。
- 拉上衣服拉鍊、扣好鉤子、繫上繩子和腰帶，然後取下無法清洗的鑲邊和飾品。
- 縫補裂痕，避免洗衣時進一步損壞衣物。



警告




### 觸電危險

- 將插頭插入一個三孔的接地電源插座上。
- 請勿拔掉接地插腳。
- 請勿使用轉接頭。
- 請勿使用延長線。
- 違反這些指示可能導致人員傷亡、失火或觸電。

- 針織品必須翻至反面，避免起毛球。請將易沾附棉絮的衣物與易產生棉絮的衣物分開清洗。合成纖維、針織品和燈芯絨會吸收來自毛巾、地毯和雪尼爾布料的棉絨。
- 洗衣後若仍殘留污漬，不得烘乾衣物，因為熱力可將污漬永久置留布料中。
- 請務必閱讀和遵循布料保養標籤，以及產品說明。不當洗衣可能損壞您的衣物。

## 2. 加入洗衣用品 (必要時)

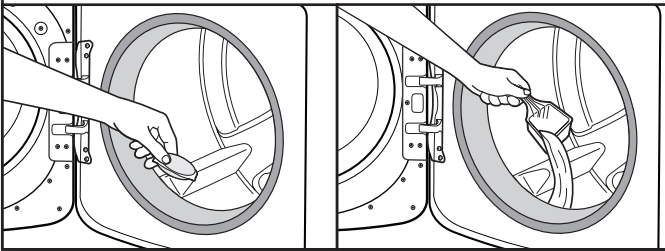

裝入衣物前可將洗衣膠囊、氧系漂白劑、護色漂白劑或衣物柔軟晶球放入內桶。

**備註：**請務必遵循製造商的指示說明。

## 3. 將衣物放進洗衣機內




將整理好的衣物鬆散地放入洗衣機。衣物須有移動空間，才能取得最佳清潔效果，減少起皺和纏繞。把機門關上，直到聽到門鎖發出喀嗒聲，完全關閉。

- 視衣物類型和行程而定，可在洗衣槽內放滿衣物，但不得塞太滿。應能輕易關閉機門。衣物建議請參閱「行程指南」。
- 混合大小衣物，避免清洗單一衣物。平均放置衣物。
- 清洗小型衣物時，用網狀洗衣袋裝入衣物。若為多項衣物，用多個袋子，並將衣物平均裝於袋內。
- 把衣物完全推入洗衣機。別讓橡膠圈上有任何衣物，以免卡在橡膠圈和機門玻璃之間。

## 4. 加入 HE 洗衣精

### 單次用洗劑盒

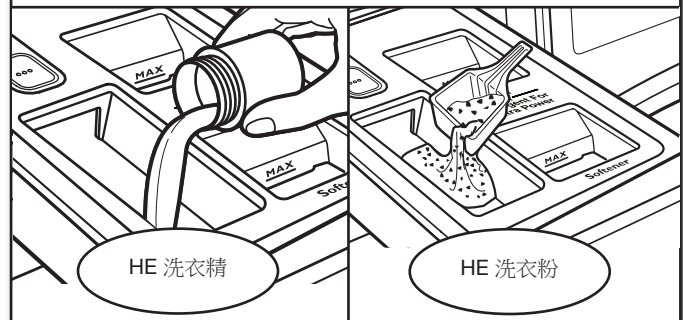


根據所用的 HE 洗劑(液體或粉末)，調整選擇器。參閱「使用洗劑盒」部份，瞭解如何使用它。

**備註：**請勿將洗衣膠囊、氧系漂白劑、護色漂白劑或衣物柔軟晶球放入洗劑盒內。這類型洗劑無法被正確投放。

## 5. 可將衣物柔軟劑放進洗劑盒內(若需要)

單次用洗劑盒

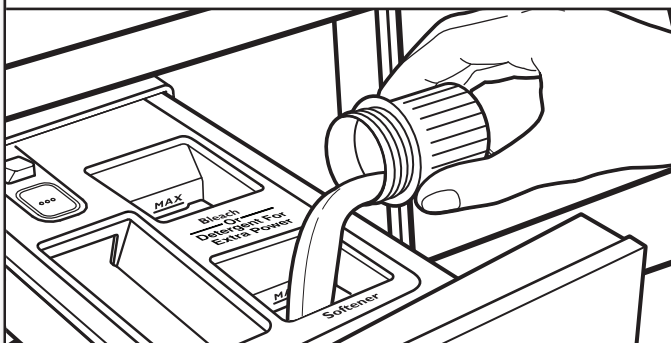

倒入定量的衣物柔軟劑至衣物柔軟劑投放格內。務必遵循製造商的說明，根據您的衣物量，使用正確的柔軟劑用量。


即使已選擇「加強洗滌」，衣物柔軟劑仍僅會在最後一次洗滌時加入。

**重要事項：**不得過量添加、稀釋或使用超過製造商建議的柔軟劑用量。倒入柔軟劑時，不得超過格子內顯示的「Max」線。過量的柔軟劑將立即進入洗衣槽。

- 不得將柔軟劑噴濺或滴落至衣物上。
- 不得在本洗衣機內使用柔軟劑晶球。這類型洗劑無法被正確投放。

## 6. 將液氯漂白劑注入洗劑盒內(若需要)

單次用洗劑盒

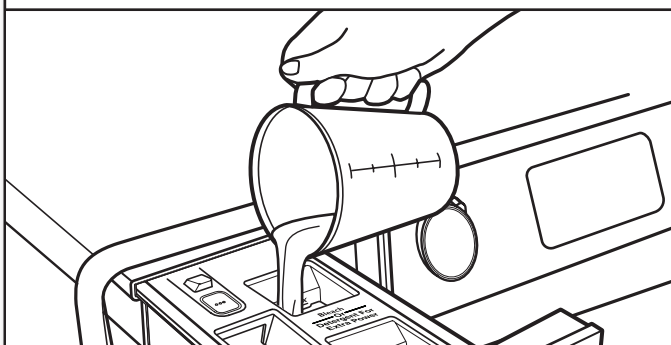

將液氯漂白劑加進漂白劑投放格內(若需要)。不得添加過量、稀釋或使用超過製造商建議的漂白劑用量。使用液態含氯漂白劑的行程內，不得使用護色漂白劑或氧系漂白劑。

**重要事項：**


- 務必測量液態含氯漂白劑。利用有傾倒口的量杯計算，請勿透過猜測決定用量。
- 不得注入超過格子內顯示的「Max」標示。過量添加可能會損壞衣物。
- 使用「affresh 槽洗淨」行程期間，不得使用濃稠的漂白劑，因為此舉會產生過多泡沫。

## 7. 觸碰「電源開關」，啟動洗衣機



慢慢關上「洗劑盒」。確定已確實關閉盒子，然後觸碰「電源」，啟動洗衣機，或遵行步驟 8。

## 8. 選擇「行程」\*

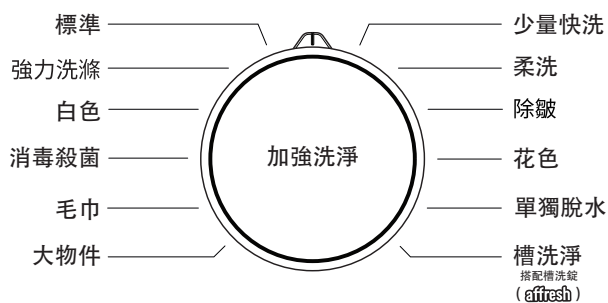

旋轉行程旋鈕，選擇洗衣行程。欲知行程功能，請參閱「行程指南」。按下旋鈕啟用「加強洗淨」選項。

「加強洗淨」選項在任何洗衣行程內，以及洗衣時間的不同階段，以結合冷水和熱水的雙溫洗衣，驅動強效的去污力。按下旋鈕，選擇此選項。

## 9. (若有需要) 調整設定\*

洗衣水溫

冷 熱

脫水轉速

關 快

衣物髒度

輕 重

顯示畫面將顯示所選行程的預設設定。欲調整設定，請按壓「洗衣水溫」、「脫水轉速」或「衣物髒度」。調整設定將變更「預計行程時間」。衣物塞太滿、放置不平均或過多泡沫都可能讓洗衣機延長行程時間。

\*並非所有行程都提供所有選項和設定。參閱「行程指南」，瞭解適用的選項和設定。

## 10. 選擇附加功能選項\*

預約洗衣

加強洗清

按鍵鎖  
(長按3秒)

蒸氣洗

完成響鈴

16Hr冷風清新

欲新增行程選項，請按壓「冷風清新」、「蒸氣」、「加強洗清」、「完成響鈴」或「控制鎖」。欲從所選行程移除選項，再次按壓選項。

## 11. 設定預約洗衣

# 預約洗衣

若不想立即展開行程，您可選擇「預約洗衣」選項。按壓此選項將延後啟動洗衣行程最長至 12 小時。

設定預約洗衣：

1. 點選「預約洗衣」，設定理想的延後時間。
2. 長按「啟動」，開始「預約洗衣」的倒數計時。倒數計時將停止閃爍。

## 12. 長按「啟動」，開始洗衣行程



長按「啟動」，開始洗衣行程。如要中途停止行程，請按壓「啟動」一次，完成後再長按「啟動」，繼續洗衣行程。取消行程，按壓「電源」。

長按「啟動」後，您將聽到機門上鎖、解鎖和再次上鎖的聲音。洗衣行程期間洗衣機門將上鎖。

解鎖機門以增加衣物：

如需開門增加 1 或 2 件遺漏的衣物，可在「加衣」燈亮起時這樣做。可增加衣物的時間將按行程選擇和衣物量而有所不同。

按壓「啟動」一次，一旦洗衣機停止運行，機門將解鎖。可能需時數分鐘。接著關閉機門，然後再次長按「啟動」，重新啟動行程。

「加衣」燈關閉後增加衣物：


取消目前行程。水份將排出，需要重新選擇行程後再次啟動。

為達成洗衣和最佳節能成果，只有在「加衣」燈亮起時增加衣物。

加衣




## 13. 行程結束後立即取出衣物

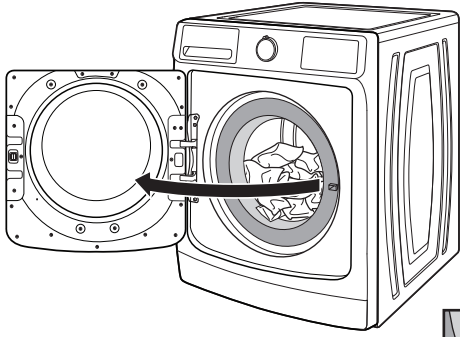

行程結束後立即取出衣物，避免氣味、金屬物品的鏽蝕殘留在衣物上。取出衣物時，確認門膠圈縫隙並檢查洗衣槽和洗衣機滾筒之間是否殘留小型物品。

若無法立即取出衣物，選擇冷風清新選項。若選擇冷風清新選項，洗衣機將週期性的啟動風扇和翻滾衣物，最長可達16小時。欲關閉冷風清新選項，按壓電源開關。欲設定洗衣機，好讓未來行程不會使用冷風清新選項，按壓冷風清新。

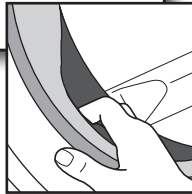

16Hr冷風清新

### 備註：

- 啟用冷風清新選項時，機門將維持上鎖。欲取消選項並解鎖機門，按壓「電源」。
- 洗衣行程完成後，洗劑盒也許會殘留少量水。這是正常現象。
- 本洗衣機配備緊密封條，避免水滲漏。為避免氣味，讓機門打開，以使用後洗衣機能風乾。

## 洗衣機保養

### 進水管

更換已使用 5 年的進水管，以降低水管故障的風險。若發現突起物、糾結、割痕、磨損或漏水，定期檢查和更換進水管。

更換進水管時：

- 用不褪色馬克筆在標籤上標記更換日期。
- 檢查老舊洗衣機的進水閥沒有堵塞。
- 新洗衣機應連接新進水管，確保妥善的密封。

### 洗衣機保養

#### 維持洗衣機清潔和最佳效能的建議

1. 請務必使用高效能洗衣精並遵循 HE 洗衣精製造商對 HE 洗衣精用量的說明。不得使用超過建議用量，因為此舉可能增加洗衣精和髒污殘留積聚在洗衣機的速率，進而產生異味。
2. 偶爾要用溫水或熱水洗衣(不僅是只用冷水洗衣)，因為溫水或熱水更能控制髒污和洗衣精積聚的速率。
3. 洗衣機用後略為打開機門，有助風乾洗衣機、避免能發出異味的殘留物積聚。
4. 定期清除機門窗戶內部表面的殘留物。更理想的保養程序是用濕布擦拭機門窗戶的整個內部。

#### 清潔滾筒洗衣機

展開下方建議的例行清潔流程前，閱讀完整的說明。應最少每月執行本「洗衣機保養程序」一次，或 30 次洗衣行程後，須視何者先發生而定。此舉能控制髒污和洗衣精積聚在洗衣機的速率。

#### 清潔門膠圈

1. 打開洗衣機門，取出所有衣物。
2. 檢查機門開口的灰色門膠圈，以及滾筒有污漬或積聚髒污之處。拉開門膠圈，檢查門膠圈下方所有區域，並檢查是否有異物。
3. 若找到污漬或積聚髒污之處，用下列程序之一，擦拭門膠圈區域：
  - a. **affresh 機器清潔拭紙程序：**
    - i. 完成行程後，輕輕拉回橡膠的門膠圈，並用 affresh 機器清潔拭紙有紋路的一面清潔整個表面。
  - b. **稀釋液態含氯漂白劑程序：**
    - i. 混合稀釋的漂白劑：用 3/4 杯 (177 mL) 液態含氯漂白劑和 1 gallon (3.8 L) 的溫熱自來水。
    - ii. 用沾有稀釋溶劑的濕布擦拭門膠圈區域。
    - iii. 靜置溶劑 5 分鐘。
    - iv. 用乾布徹底清潔所有區域，並打開機門，風乾洗衣機內部。

#### 重要事項：

- 用漂白水清潔時要佩戴手套。
- 參考漂白水製造商的說明，正確使用產品。

#### 清潔洗衣機內部

本洗衣機配備特殊行程，能結合「affresh 槽洗錠」或一般的液態含氯漂白劑，徹底清潔洗衣機的內部。蒸氣洗衣機機種也使用蒸氣，提升此特殊行程中的清潔力。

**重要事項：**使用「affresh 槽洗淨」行程期間，不得使用濃稠的漂白劑，因為此舉會產生過多泡沫。

**備註：**展開清潔流程前，閱讀完整的說明。

## 洗衣機保養(續上頁)

### 開始程序

#### 1. 「affresh 槽洗淨」(建議使用, 因其能達成最佳效能):

- a. 打開機門並取出所有衣物。
- b. 使用「affresh 機器清潔拭紙」或柔軟的濕布或海綿, 擦拭機門內的玻璃。
- c. 加入「affresh 槽洗錠」至洗衣機滾筒內。
- d. 不得將「affresh 槽洗錠」加至洗劑盒內。
- e. 遵行本程序時, 不得加入任何洗衣精或其他化學物至洗衣機內。
- f. 關閉洗衣機門。
- g. 選擇「affresh 槽洗淨」。
- h. **針對部份機種:** 選擇「冷風清新」選項, 有助於完成行程後風乾洗衣機內部。  
**備註:** 洗衣機記得您上次的選項選擇, 且在未來的洗衣行程中繼續使用, 直到您取消選擇該選項。風扇打開時, 洗衣機門會上鎖。欲解鎖機門, 按壓「電源」。
- i. 按壓「啟動」, 開始行程。「affresh 槽洗淨」行程說明如下。

#### 2. 含氯漂白劑程序:

- a. 打開機門並取出所有衣物。
- b. 打開洗劑盒, 加入常用的含氯漂白劑至漂白劑投放格和衣物柔軟劑投放格的「MAX」線。可使用傳統或 HE 含氯漂白劑。  
**重要事項:** 不得使用濃稠的漂白劑, 因為會產生過多泡沫。  
**備註:** 使用比建議量更多的液態含氯漂白劑長期之後將損壞洗衣機。
- c. 關閉洗衣機門和洗劑盒。
- d. 遵行本程序時, 不得加入任何洗衣精或其他化學物至洗衣機內。
- e. 選擇「affresh 槽洗淨」行程。
- f. **針對部份機種:** 選擇「冷風清新」選項, 有助於完成行程後風乾洗衣機內部。  
**備註:** 洗衣機記得您上次的選項選擇, 且在未來的洗衣行程中繼續使用, 直到您取消選擇該選項。風扇打開時, 洗衣機門會上鎖。欲解鎖機門, 按壓「電源」。
- g. 按壓「啟動/暫停」, 開始洗衣行程。「affresh 槽洗淨」行程說明如下。

**備註:** 為取得最佳成果, 請勿中斷行程。

#### 「affresh 槽洗淨」行程的運行說明:

1. 「affresh 槽洗淨」行程將自動偵測洗衣機內是否有任何衣物。
2. 若未偵測到衣物, 將開始行程。
  - a. 若偵測到任何衣物, 將顯示「rL」(取出衣物)。機門將解鎖。打開機門並取出滾筒內的所有衣物。
  - b. 按壓「電源」, 清除「rL」代碼。
  - c. 按壓「啟動/暫停」, 重新開始洗衣行程。

## 洗衣機保養(續上頁)

3. **僅蒸氣機種:** 在行程的前 20 分鐘, 洗衣機將啟動蒸氣, 但滾筒不會轉動或注水。在此初步階段您將看到機門玻璃上的凝結作用。若您正在使用「affresh 槽洗錠」, 它在蒸氣階段不會全部溶解。這是正常現象。

行程完成後, 略為打開機門, 讓空氣流通得更好, 並風乾洗衣機內部。

### 清潔洗劑盒

使用洗衣機一段時間後, 您可能會發現洗劑盒積聚殘留物。欲清除洗劑盒的殘留物, 取出洗劑盒並用「affresh 機器清潔拭紙」或濕布擦拭表面, 並於運行「affresh 槽洗淨」行程之前或之後, 用毛巾擦乾盒子。若有需要, 使用全效表面清潔劑。

**重要事項:** 不得用洗碗機清潔洗劑盒。

### 清潔洗衣機外部

使用「affresh 機器清潔拭紙」或柔軟的濕布或海綿, 擦拭任何溢出物。偶爾擦拭洗衣機外部, 讓它看起來光潔如新。使用「affresh 機器清潔拭紙」或溫和的肥皂和水。

**重要事項:** 為避免損壞洗衣機的烤漆, 不得使用磨蝕性產品。

## 清潔洗衣機行程提醒

**備註:** 並非所有「affresh 槽洗淨」行程都帶有提醒燈。

洗衣機運行 30 個洗衣行程後, 洗衣行程結束後「affresh 槽洗淨」的 LED 燈將閃爍。這是提醒您需運行「affresh 槽洗淨」行程。



若未啟動「affresh 槽洗淨」行程, 運行 3 次或以上的正常洗衣行程後, 洗衣行程結束後, LED 燈將停止閃爍。完成 30 次以上的洗衣行程後, 「affresh 槽洗淨」LED 燈將於特定洗衣行程結束後再度閃爍, 作為提醒。


## 取出洗劑盒

### 單次用洗劑盒


#### 取出洗劑盒

##### 拆卸方式：

1. 拉出洗劑盒，直到不能把它拉出為止。
2. 按下釋放鍵，並把它拉出，以取出洗劑盒。

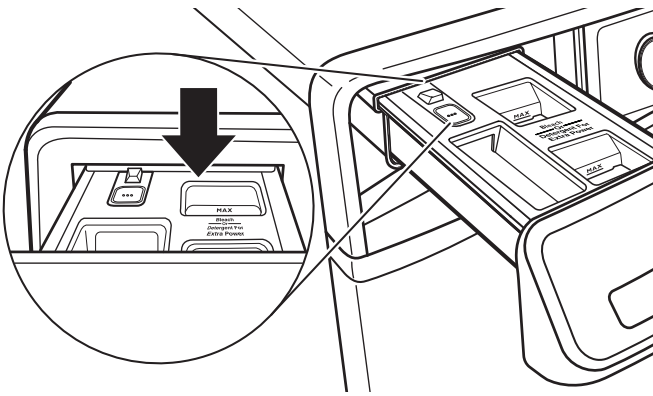

3. 直接向上拉起蓋子面板。

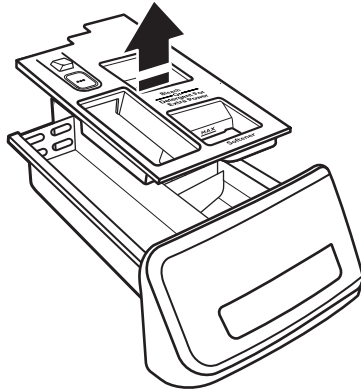


## 取出洗劑盒 (續上頁)

### 單次用洗劑盒 (續上頁)

#### 更換方式：

1. 把蓋子面板滑進洗劑盒的撐柱上。
2. 利用洗衣機的導向裝置對齊洗劑盒的邊緣，接著把洗劑盒滑進槽內。

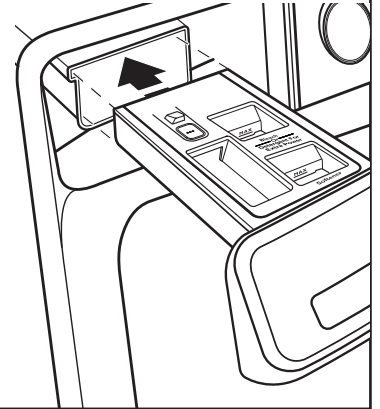

## 不再使用和度假保養

只可在您在家時運行洗衣機。若搬家，或將有一段時間不使用洗衣機，遵循下列步驟：

1. 拔下洗衣機電源，或切斷電源。
2. 關閉洗衣機水源，避免因水壓升高導致淹水。

**實用秘訣：**在洗衣機上標記提醒備註，下次使用洗衣機前要恢復供水。

3. 清潔洗劑盒請參閱「清潔洗劑盒」。

## 冬季儲存保養

**重要事項：**為避免毀損，在洗衣機不會結冰之處，安裝和儲存洗衣機。由於管內可能殘存水份，水結冰後可能會損壞洗衣機。若在結冰天氣下存放或搬運洗衣機，做好禦寒措施。

### 洗衣機的禦寒措施：

1. 關閉冷熱水龍頭，接著中斷和排乾進水管。  
**實用秘訣：**在洗衣機上繫上提醒備註，下次使用洗衣機前要恢復供水。
2. 放 1 qt (1 L) 的 R.V. 防凍劑至洗衣機滾筒內，以「標準」行程運行洗衣機約 2 分鐘，混合防凍劑和殘留水份。
3. 拔下洗衣機的插頭，或切斷電源。

## 運送洗衣機

1. 關閉兩個水龍頭。中斷和排乾進水管。
2. 若需在結冰的天氣下搬運洗衣機，執行作業前遵循「冬季儲存保養」說明。
3. 從排水系統和洗衣機背面拆下排水管。
4. 拔下電線。
5. 把進水管和排水管放在洗衣機滾筒內。
6. 用橡皮筋或纜線紮帶紮緊電線，避免它們懸吊至地面。

**重要事項：**致電維修部安裝全新的運送螺栓。不得再次使用運送螺栓。必須以直立的方式搬運洗衣機。為避免洗衣機的結構毀損，搬遷和設定洗衣機的作業，必須由認證技工妥善執行。

## 警告



### 觸電危險

- 將插頭插入一個三孔的接地電源插座上。  
請勿拔掉接地插腳。  
請勿使用轉接頭。  
請勿使用延長線。  
違反這些指示可能導致人員傷亡、失火或觸電。

## 重新安裝/再使用洗衣機

- 在長期未用、度假、冬季儲存或搬遷後重新安裝洗衣機：
1. 參閱「安裝說明」，尋找洗衣機的安裝位置、平放和連接洗衣機。
  2. 再次使用洗衣機前，遵行建議程序，運行洗衣機：  
**再次使用洗衣機：**
    1. 沖洗水管和喉管。重新連接進水管。開啟冷熱水水龍頭。
    2. 插上洗衣機插頭，或重新連接電源。
    3. 用「加強洗淨」行程運行洗衣機，以清潔洗衣機，或若使用防凍劑，則清除此物質。僅使用 HE 洗衣精。中量衣物按製造商的建議量減半。



# 故障排除

首先，請嘗試此處的建議辦法，或造訪我們的網站：[www.maytag.com.tw](http://www.maytag.com.tw)。

如果您經歷了	可能原因	解決方案
<b>顯示畫面中顯示錯誤代碼(顯示 2 和 3 位數)</b>		
一旦修正所有可能問題後，按壓「電源開關」一次，清除所有代碼。重新選擇和重新啟動行程。		
顯示畫面出現「Sd」或「Sud」(過多泡沫)	洗衣機有過多泡沫。洗衣機正在運行減少泡沫的例行作業。	允許洗衣機繼續運行。僅使用 HE 洗衣精。經常遵循洗衣精製造商的說明，並根據衣物量，決定洗衣精的用量。並非所有標示為「高效能」的洗衣精都內含相同配方，而減少泡沫的能力也有所不同。例如：天然、有機或自製 HE 洗衣精可能會產生大量泡沫。若您使用上述其中一種產品，並看到顯示畫面上出現「Sd」或「Sud」錯誤碼，考慮使用不同的 HE 洗衣精。
顯示畫面顯示 Lo 後再顯示 FL 或 F8 後再顯示 E1 或 Lo 後再顯示 FL 或 F08 後再顯示 E01(供水錯誤)	檢查妥善的水源。	機門上鎖時機體將排水 8 分鐘。必須允許排水行程的完成，否則錯誤代碼無法重設。完成後，按壓「電源開關」一次，清除代碼。接著再按壓「電源開關」，重新啟動洗衣機。若再次顯示代碼，致電維修部。
		必須連接兩個管子，且水應流進進水閥。
		冷熱水水龍頭都必須打開。
		也許洗衣機的進水閥網罩堵塞。
		清除進水管任何扭曲處。
檢查妥善的進水管。	僅使用製造商建議的進水管。	
顯示畫面顯示 F9 後再顯示 E1 或 F09 後再顯示 E01 (排水幫浦系統錯誤)	檢查管線，確定已正確安裝排水管。排水管最多插入立管的 4½" (114 mm) 深處。	檢查已正確安裝排水管。
		確定排水管沒有糾結、刺穿或堵塞。
		取出管內任何堵塞物。
		使用排水管固定架，並穩妥連接至漏盆或水槽。
		若排水管末端離地面有 96" (2.4 m)，降低排水管的高度。
未使用 HE 洗衣精，或使用太多 HE 洗衣精。	僅使用 HE 洗衣精。經常測量洗衣精並根據衣物量和衣物髒度，遵循製造商的用量說明。	
顯示畫面顯示 F5 後再顯示 E2 或 F05 後再顯示 E02 (機門無法上鎖)	洗衣機門無法上鎖。	按壓「電源開關」，取消行程。檢查機門已完全關閉且以上鎖。檢查也許洗衣機內有衣物堵住機門，所以無法關門。
顯示畫面出現「rL」(取出衣物)	「affresh 槽洗淨」行程時偵測到滾筒內有衣物。	取出滾筒的衣物，然後重新啟動「affresh 槽洗淨」行程。

# 故障排除

首先，請嘗試此處的建議辦法，或造訪我們的網站：[www.maytag.com.tw](http://www.maytag.com.tw).

如果您經歷了	可能原因	解決方案
顯示畫面中顯示錯誤代碼(顯示 2 和 3 位數)(續上頁)		

警告

**觸電危險**

將插頭插入一個三孔的接地電源插座上。  
 請勿拔掉接地插腳。  
 請勿使用轉接頭。  
 請勿使用延長線。  
 違反這些指示可能導致人員傷亡、失火或觸電。

顯示畫面顯示除上述外的 F# E# 或 F## E## 代碼	系統錯誤代碼。	按壓「電源開關」一次，清除代碼。接著再按壓「電源開關」，重新啟動洗衣機。若再次顯示代碼，致電維修部。拔下洗衣機插頭 30 秒，然後再插上插頭。
洗衣機發出錯誤嗶聲	未打開和關閉機門最少 3 個行程。	此代碼可能在首次啟動洗衣機時出現。開啟和關閉機門，清除顯示。
按壓「啟動」時，洗衣機會發出嗶聲。	洗衣機門關不緊。	完全關上乾衣機門。
「槽洗淨」LED 燈在洗衣行程結束後閃爍(部份機種)	洗衣機已運行了 30 次洗衣行程，提醒您要運行「affresh 槽洗淨」行程。	運行「affresh 槽洗淨」行程。若未啟動「affresh 槽洗淨」行程，運行 3 次或以上的正常洗衣行程後，洗衣行程結束後，LED 燈將停止閃爍。完成 30 次以上的洗衣行程後，「affresh 槽洗淨」LED 燈將於特定洗衣行程結束後再度閃爍，作為提醒。

# 故障排除

首先，請嘗試此處的建議辦法，或造訪我們的網站：[www.maytag.com.tw](http://www.maytag.com.tw)。

如果您經歷了	可能原因	解決方案
<b>震動或不平衡</b>		
震動、搖晃或「前進後退」	支腳可能未和地板接觸且鎖死。	前腳和後腳必須穩妥與地板接觸，且洗衣機必須平放，才能正常運行。必須把鎖緊螺母牢牢拴緊在洗衣機底部。
	洗衣機也許未平放。	檢查地板是否彎曲或下垂。若地板不平，放一塊 3/4" (19 mm) 夾板在洗衣機底部，可減少噪音。不得將洗衣機安裝在架高的木平台上。 參閱「安裝說明」的「平放洗衣機」。
	衣物可能放置不均或太大件。	避免把衣物塞太滿。避免清洗單一衣物。用額外幾種衣物平衡類似地毯或牛仔夾克之類的單一衣物。 衣物不適用所選行程。參閱「行程指南」和「使用洗衣機」。
	運送固定螺栓也許還在洗衣機的背面。	參閱「安裝說明」的「取下洗衣機上的運送螺栓」。
<b>噪音</b>		
喀嗒或金屬噪音	機門上鎖或解鎖。	機門將上鎖、解鎖，再上鎖。按壓「啟動」，將聽到 3 聲喀嗒聲。這是正常現象。
	洗衣機排水系統內有物件。	洗衣前清空口袋。零錢之類的零散物品可能掉落至洗衣機滾筒和水槽之間，進而堵住幫浦。也許需要致電維修部清除物品。 聽到衣物金屬物品，例如：金屬按扣、搭扣或拉鍊與不鏽鋼滾筒接觸後發出聲音是正常現象。
淙淙聲或嗡嗡聲	洗衣機也許正在排水。	幫浦也許會發出嗡嗡聲，並偶爾發出淙淙聲或在轉動/排水行程排去最後水量時發出沖水聲。這在行程特定階段是正常現象。
滾動或晃動，並偶爾發出喀嗒聲(在低速轉動時)	平衡系統的鋼珠正在平均衣物。	這在行程特定階段是正常現象。
<b>漏水</b>		
檢查已遵循正確的排水管安裝說明。	未緊密連接注水管。	拴緊注水管的連接。
	注水管墊圈。	穩妥拴緊所有四個注水管的扁平墊圈。
	排水管連接。	檢查已妥善連接排水管至漏盆或水槽。
	檢查家用管線是否有洩漏、堵塞或漏水。	水流可能會因為水槽或漏盆堵塞而回流。檢查所有家用管線是否有洩漏(水槽、漏盆和水龍頭)。
	排水管末端的固定接頭(或尼龍網)也許堵塞。	取下排水管的固定接頭/尼龍網。

# 故障排除

首先，請嘗試此處的建議辦法，或造訪我們的網站：[www.maytag.com.tw](http://www.maytag.com.tw).

如果您經歷了	可能原因	解決方案
<b>漏水(續上頁)</b>		
機門或洗衣機後方漏水或滲出泡沫	未使用 HE 洗衣精，或使用太多 HE 洗衣精。	僅使用 HE 洗衣精。一般洗衣精的泡沫可能導致機門或後方洩漏。經常測量洗衣精並根據衣物量要求，遵循製造商的用量說明。
	運行「affresh 槽洗淨」行程時使用濃稠的漂白劑。	運行「affresh 槽洗淨」行程時使用「affresh 槽洗錠」或一般的不增稠漂白劑。
	機門玻璃上有殘留物。	偶爾清潔玻璃窗下側，避免潛在的洩漏問題。
	「加衣」時打開了機門。	行程開始後開門，然後水從門內滴落。
機門四周漏水。	內門玻璃沾有頭髮、絨毛或其他殘留物，以致於門膠圈未密封。	清潔內門玻璃和門膠圈。參閱「洗衣機維護」章節的「清潔門膠圈」。
<b>洗衣機未如預期的妥善運行</b>		
衣物未全部浸泡於水中	機門看不到水位，或水位未超過全部衣物。	這是 HE 滾筒式洗衣機的正常現象。洗衣機感應到衣物量，並注入正確的水量，以達成最佳清潔效果。
洗衣機未運行或注水；洗衣機停止運作	檢查妥善的水源。	必須連接兩個管子，且水應流進進水閥。
		冷熱水水龍頭都必須開啟。
		檢查進水閥網罩沒有堵塞。
		檢查進水管任何扭曲處，此現象可能限制水流。



**警告**



### 觸電危險

- 將插頭插入一個三孔的接地電源插座上。
- 請勿拔掉接地插腳。
- 請勿使用轉接頭。
- 請勿使用延長線。
- 違反這些指示可能導致人員傷亡、失火或觸電。

洗衣機未運行或注水；洗衣機停止運作(續上頁)	檢查正常的電源供應。	將電源線插入一個 3 孔的接地電源插座上。
		不得使用延長線。
		確保插座有電源。
		不得插入至 GFCI「接地故障斷路器」。
		檢查電源，或致電電工，檢查電壓是否過低。
		重設跳開的斷路器。更換任何燒壞的保險絲。
		<b>備註：</b> 若問題持續，聯絡電子技工。

# 故障排除

首先，請嘗試此處的建議辦法，或造訪我們的網站：[www.maytag.com.tw](http://www.maytag.com.tw).

如果您經歷了	可能原因	解決方案
<b>洗衣機未如預期的妥善運行(續上頁)</b>		
洗衣機未運行或注水； 洗衣機停止運作(續上頁)	正常的洗衣機運作。	機門必須全部關閉並上門鎖，洗衣機才能運行。
		洗衣機在行程特定階段將暫停。不要中斷行程。
		洗衣機於特定行程期間將暫停約 2 分鐘。允許行程繼續。有些行程會有滾動和浸泡階段。
		洗衣機也許會停止，以減少泡沫。僅使用適量的 HE 洗衣精。
		「冷水」於行程開始時會用略少的水，以提供高濃度的洗衣精，進行佳化的清潔行動。以此濃度滾動後，會用較多的水來完成清洗。
	僅蒸氣機種：在「affresh 槽洗淨」行程的前 20 分鐘，洗衣機將啟動蒸氣，但滾筒不會轉動或注水。在此初步階段您將看到門玻璃上的凝結作用。若您正在使用「affresh 槽洗錠」，它在蒸氣階段不會全部溶解。這是正常現象。	
洗衣機門沒有關緊。	洗衣機運行期間機門必須關閉。	
未按建議將衣物放入洗衣機內。	取出數件衣物，再於洗衣機滾筒內平均放置衣物。關門，然後按壓「啟動」。	行程開始後不要放入超過 1 或 2 件衣物，避免把洗衣機塞滿或衣物放置不平均。
		不要加水至洗衣機。
		未使用 HE 洗衣精，或使用太多 HE 洗衣精。
僅使用 HE 洗衣精。一般洗衣精起的泡沫可能會減緩或停止洗衣機運行。經常測量洗衣精並根據衣物量要求，遵循製造商的用量說明。		
要清除泡沫，請取消行程。選擇「單獨脫水」與「加強洗滌」。按壓「啟動」。請勿加入更多洗衣精。		
確定行程之間沒有把門打開。	完成任何洗衣行程後，必須開門，然後在開始新行程時，再關門。	
洗衣機沒有排水/轉動； 衣物仍濕	排水管應延伸至立管的 4.5" (114 mm) 處。	檢查已正確安裝排水管。使用排水管固定架，並穩妥連接至漏盆或水槽。不要用膠帶黏住排水管的開口。
	排水管堵塞或排水管末端的高度離地面超過 96" (2.4 m)。	若排水管末端離地面有 96" (2.4 m)，降低排水管的高度。取出管內任何堵塞物。請參閱「安裝說明」中的「安裝要求」。
	排水管末端的固定接頭/尼龍網堵塞。	取下排水管的固定接頭/尼龍網。
	排水管在立管內擠壓的太緊，或是用膠帶黏在立管商。	排水管應鬆鬆，且穩妥與立管接合。不得用膠帶黏住排水管。水管需要透氣縫隙。參閱「安裝說明」的「連接排水管」。

# 故障排除

首先，請嘗試此處的建議辦法，或造訪我們的網站：[www.maytag.com.tw](http://www.maytag.com.tw).

如果您經歷了	可能原因	解決方案
<b>洗衣機未如預期的妥善運行(續上頁)</b>		
洗衣機沒有排水/轉動；衣物仍濕 (續上頁)	使用轉速較慢的行程。	轉速較慢行程比轉速較快行程的去水力低。針對您的衣物選擇建議的行程/轉速。
	未按建議將衣物放入洗衣機內。	塞太滿或未平均放置的衣物也許無法讓洗衣機正確轉動，因此衣物比正常狀況殘留更多水分。請參閱「行程指南」，瞭解每個行程的建議衣物量。
	衣物也許放置得不平均。	避免清洗單一衣物。用額外幾種衣物平衡類似地毯或牛仔夾克之類的單一衣物。
	未使用 HE 洗衣精，或使用太多 HE 洗衣精。	僅使用 HE 洗衣精。一般洗衣精起的泡沫，或使用太多洗衣精，可能會減緩或停止洗衣機排水或轉動。請務必測量洗衣精用量並根據衣物量，遵循製造商的用量說明。欲清除過多泡沫，選擇「單獨脫水」與「加強洗滌」。請勿加入更多洗衣精。
	有些小物品可能會掉落至幫浦，或堵在洗衣機滾筒和外槽之間。	檢查滾筒，是否有物品卡在桶槽孔洞中。請清空衣物的口袋，若清洗小物品，使用洗衣袋。
洗衣行程結束後門上鎖。	洗衣行程結束後洗衣機仍殘留水份。	選擇「單獨脫水」，排去殘留在洗衣機內的任何水份。排水結束後洗衣機門將解鎖。
	已開啟「冷風清新」。	開啟此選項後，風扇和洗衣桶會間歇性運轉滾動衣物長達 12 小時。此期間機門維持上鎖。欲解鎖機門，按壓「電源開關」，取消「冷風清新」選項。
機門將不會解鎖。	機門將於行程開始時上鎖。	若「加衣」燈亮起，按壓「啟動」一次。機門將解鎖。
洗衣或洗滌溫度不正確或錯誤	檢查妥善的水源。	確認沒有錯誤連接冷熱水進水管。
		兩條管子都必須連接至洗衣機和水龍頭，且都有冷熱水流進進水閥。
		檢查進水閥網罩沒有堵塞。
	清除管子內任何扭曲處。	
清洗許多衣物。	您的熱水槽也許沒有足夠的熱水，來供應熱水或溫水洗滌的次數。這是正常現象。	
理想的設定或選項沒有亮起。	為達成最佳效果，並非每個行程都提供所有設定，且部份選項無法合併使用。	參閱「行程指南」，瞭解每個行程的適用設定和選項。
未洗清衣物	檢查正確的水源。	確認沒有錯誤連接冷熱水進水管。
		必須連接兩個管子，且水應流進進水閥。
		冷熱水水龍頭都必須打開。
		也許洗衣機的進水閥網罩堵塞。
		清除進水管任何扭曲處。
	未使用 HE 洗衣精，或使用太多 HE 洗衣精。	來自非 HE 洗衣精的泡沫可能讓洗衣機未正確運行。
	僅使用 HE 洗衣精。務必測量洗衣精並根據衣物量和髒度，遵循製造商的用量說明。	

# 故障排除

首先，請嘗試此處的建議辦法，或造訪我們的網站：[www.maytag.com.tw](http://www.maytag.com.tw)。

如果您經歷了	可能原因	解決方案
<b>洗衣機未如預期的妥善運行(續上頁)</b>		
未洗清衣物(續上頁)	未按建議將衣物放入洗衣機內。	避免將洗衣機塞滿衣物。洗衣機塞得太滿，就無法妥善洗清衣物。僅放入乾燥衣物。參閱「行程指南」，瞭解每個行程的建議衣物量。 使用待洗衣料專用的行程。 洗衣機啟動後僅加入 1 或 2 件衣物。
	衣物也許放置得不平均。	若未平均放置衣物，將開始一個重新分佈衣物的洗衣流程。此舉可能延長行程時間。避免清洗單一衣物。用額外幾種衣物平衡類似地毯或牛仔夾克之類的單一衣物。
衣物皺褶、扭結或纏繞。	未按建議將衣物放入洗衣機內。	放入適量，以致能移動自在的衣物量。衣物須能自在移動，才能減少皺褶和纏繞。參閱「行程指南」，瞭解每個行程的建議衣物量。 混合不同類型的衣物，減少纏繞。選擇適合洗衣類型的建議行程。
	衣物的洗衣時間太久。	選擇較低衣物髒度。注意：選擇較高衣物髒度，不見得就能深層清洗該衣物。
	洗衣轉速太快。	選擇較低轉速。注意：轉速低時，衣物比用轉速高行程清洗為濕。
	未即時取出洗衣機的衣物。	即時取出洗衣機的衣物，或若行程結束時無法取出衣物，使用「冷風清新」選項。
	未為須清洗衣物選擇正確的行程。	選擇「柔洗」行程或其他慢速行程，減少皺褶。
	洗衣水不夠暖，無法撫平皺褶。	若對衣物安全無礙，使用溫水或熱水。
未清潔或去除污漬	未按建議將衣物放入洗衣機內。	放入適量、能自由翻滾的衣物量。衣物應能移動自如，才能取得最佳清潔效果。參閱「行程指南」，瞭解每個行程的建議衣物量。 洗衣機啟動後僅加入 1 或 2 件衣物。
	未使用 HE 洗衣精，或使用太多 HE 洗衣精。	僅使用 HE 洗衣精。請務必測量洗衣精並根據衣物量和衣物髒度，遵循製造商的用量說明。
	硬水或水中含高濃度的鐵(鐵鏽)。	您可能需要安裝軟水機及/或鐵質過濾器。
	使用衣物柔軟晶球。	本洗衣機若放入柔軟晶球，也許無法正常運行。倒入衣物柔軟劑至衣物柔軟劑投放格內。
	低速行程使用洗衣粉。	考慮使用洗衣精。

# 故障排除

首先，請嘗試此處的建議辦法，或造訪我們的網站：[www.maytag.com.tw](http://www.maytag.com.tw)。

如果您經歷了	可能原因	解決方案
<b>洗衣機未如預期的妥善運行(續上頁)</b>		
未清潔或去除污漬 (續上頁)	沒有按衣物類型使用正確的行程。	使用較高衣物髒度設定和溫水洗衣，增進清潔效能。
		若使用「少量快洗」行程，僅清洗幾件衣物。
		若要清洗骯髒衣物，使用「加強洗淨」。
		若為極為骯髒的衣物，增加加強洗淨。
	未使用洗劑盒。	使用洗劑盒，避免漂白劑和衣物柔軟精產生的污漬。
		開始行程前注入洗劑至洗劑盒。
		避免注入太多洗劑至洗劑盒。 除直接在衣物上具體說明的產品外，不得添加其他產品。
洗劑盒是空的。	注入 HE 洗衣精至洗劑盒的「Max」線。	
未合併清洗類似顏色的衣物。	合併清洗類似顏色的衣物，並在完成行程後立即取出衣物，能避免衣物染色。	
使用硬水或洗衣精不足。	用冷水或硬水清洗極骯髒衣物時，增加較多洗衣精。	
	在部份機種中，按壓「水硬度」，變更水硬度為「硬」。	
異味	未按建議進行每月維護。	每月或運行 30 個行程後，運行「affresh 槽洗淨」。請參閱「洗衣機維護」內的「洗衣機保養」。
		行程完成後立即取出洗衣機的衣物。若完成清洗後無法立即從洗衣機取出衣物，使用「冷風清新」選項。
	未使用 HE 洗衣精，或使用太多 HE 洗衣精。	僅使用 HE 洗衣精。請正確測量用量，請務必 遵循製造商的說明。 請參閱「洗衣機保養」章節。
	用後門沒有維持打開。	本洗衣機配備緊密門膠圈，避免水滲漏。為避免氣味，讓機門打開，以使用後洗衣機能風乾。
布料損壞	洗衣行程期間口袋理有尖銳物品。	洗衣前清空口袋、拉上拉鍊、扣上按扣或鉤子，避免鉤破和撕裂衣物。
	繩子和帶子可能會纏繞。	開始清洗衣物前，繫上所有繩子和帶子。
	洗衣前衣物可能就已毀損。	洗衣前修補接縫處的撕裂口和斷線。
	若洗衣機塞太滿，將可能會損壞布料。	避免將洗衣機塞滿衣物。僅放入乾燥衣物。
		使用待洗衣料專用的行程。
		洗衣機啟動後僅加入 1 或 2 件衣物。
	若機門夾住某件衣物、或把它卡在門玻璃和橡膠封條之間，將可能會損壞布料。	不要加入過量衣物至洗衣機。
		請將衣物完全推入洗衣機。
也許未正確添加液態含氯漂白劑。	不得將液態含氯漂白劑直接倒進衣物裡。擦拭溢出的漂白劑。	
	未稀釋的漂白劑可能會損壞布料。不得使用超過製造商建議的用量。	



# 故障排除

首先，請嘗試此處的建議辦法，或造訪我們的網站：[www.maytag.com.tw](http://www.maytag.com.tw)。

如果您經歷了	可能原因	解決方案
<b>洗衣機未如預期的妥善運行(續上頁)</b>		
灰白、骯髒的顏色	未妥善分類衣物。	混合白色和有色衣物共洗可能會讓衣物染色。從白色和淺色衣物中取出深色衣物。
	洗衣溫度太低。	若衣物可用，則使用熱水或溫水。確定您的熱水系統足以供應熱水洗衣。
	使用硬水或洗衣精不足。	用冷水或硬水清洗極骯髒衣物時，增加較多洗衣精。 在部份機種中，按壓「水硬度」，變更水硬度為「硬」。
洗劑盒操作不正確。	洗劑盒堵塞或太早配送洗劑。	不要過度注入洗劑至洗劑盒。注入太多洗劑能讓洗劑盒立即配送洗劑。
		開始行程前注入洗劑至洗劑盒。
	漂白劑投放格內未使用液態含氯漂白劑。	低水壓家庭可能有洗劑盒殘留洗衣粉的現象。為避免此現象，視您的衣物和情況而定，可選擇用溫水洗衣。
	行程完成後有水殘留於洗劑盒。	只能將液氯漂白劑注入於漂白劑投放格。 行程完成後有少量水殘留於洗劑盒是正常現象。
洗衣膠囊沒有溶解	加入膠囊的程序不正確。	確定是在加入衣物前加入膠囊。不要將膠囊加至洗劑盒。遵循製造商說明，避免損壞衣物。
行程時間變更，或行程時間太長	正常的洗衣機運作。	行程時間按水壓、水溫、洗衣精和衣物而自動變更。您選擇的選項也將影響行程時間。
	洗衣機有過多泡沫。	偵測到過多泡沫時，將自動啟動特殊的泡沫例行作業，以清除過多泡沫，同時確保妥善清洗衣物。此作業將增加原有行程的運行時間。
	衣物也許放置得不平均。	若未平均放置衣物，將開始一個重新分佈衣物的洗衣流程。此舉可能延長行程時間。避免清洗單一衣物。用額外幾種衣物平衡類似地毯或牛仔夾克之類的單一衣物。
	沒有按衣物類型使用正確的行程。	「少量快洗」行程旨在清洗少量略髒衣物(2-4 件)。若用此行程清洗大量衣物，行程時間將增加。 使用「少量快洗」或「柔洗」行程時，您應清洗少量衣物。此舉確保能輕柔清洗衣物，同時不增加行程時間。
控制鍵無回應。	「控制鎖」已開啟。	按壓「控制鎖」3 秒，解鎖控制鍵。對於按住「控制鎖」的每一秒，顯示將倒數計時一秒，您將看到「3」、「2」，然後是「1」。
行程開始前機門玻璃上有洗衣精	洗衣精可從單次用洗劑盒自由流動。	放進衣物前不要加入洗衣精。

## 幫助和服務

在打電話要求幫助或服務之前。請查閱“故障排除”章節。它可能會幫您省下叫修服務的成本。假如您還需要幫助，請遵照下列指示去作：  
在打電話之前，請先了解洗衣機之購買日期、完整的機型與機號。這些的資料可幫助我們更快地回應您的需求。

### 如果您需要更換的零件

如果您需要訂購更換之零件，我們建議您僅使用工廠指定的零件。這些零件可適當的匹配並運作正常，因為其生產製作依從所有Maytag家電的同樣精密標準製造。

### 要在您的所在地區找到原廠指定之零件：

請直接與出售洗衣機之經銷商或惠而浦公司連絡。

---

## 進口商資訊

### 台灣惠而浦股份有限公司

消費者免付費服務專線：0800 258 558

消費者服務信箱：service\_tw@whirlpool.com

官網：[www.maytag.com.tw](http://www.maytag.com.tw)

## PRODUCT SPECIFICATIONS:

Models	8TMHW6630HW
Product name	Washer
Power supply	120 V / 60 Hz
Max. wash load (dry clothes)	17.0 kg
Water pressure	0.03~0.7 MPa
Rated power	1,000 W
Maximum Spin Speed	1,160 rpm
Product color (end digit)	W=White
Weight	100 kg
External dimensions (H x W x D)	982 x 686 x 837 (mm)

**NOTE:** Actual specifications are as shown on the machine nameplate.

For information on RoHs, please visit the official website: [www.maytag.com.tw](http://www.maytag.com.tw).

## WASHER SAFETY

### Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

**! DANGER**

**You can be killed or seriously injured if you don't immediately follow instructions.**

**! WARNING**

**You can be killed or seriously injured if you don't follow instructions.**

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

### IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** To reduce the risk of fire, electric shock, or injury to persons when using the washer, follow basic precautions, including the following:

- Read all instructions before using the washer.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, other flammable, or explosive substances as they give off vapors that could ignite or explode.
- Do not add gasoline, dry-cleaning solvents, or other flammable, or explosive substances to the wash water. These substances give off vapors that could ignite or explode.
- Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for 2 weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot water system has not been used for such a period, before using the washing machine, turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.
- Do not allow children to play on or in the washer. Close supervision of children is necessary when the washer is used near children.
- Before the washer is removed from service or discarded, remove the door or lid.
- Do not reach into the washer if the drum, tub or agitator is moving.
- Do not install or store the washer where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the washer or attempt any servicing unless specifically recommended in this manual or in published user-repair instructions that you understand and have the skills to carry out.
- See Installation Instructions for grounding instructions.

**SAVE THESE INSTRUCTIONS**

# ACCESSORIES

## INSTALLATION & MAINTENANCE ACCESSORIES

**FACTORY CERTIFIED PARTS** – these three words represent quality parts and accessories designed specifically for your appliance. Time tested engineering that meets our strict quality specifications.


---

## FACTORY CERTIFIED PARTS

---


Accessories designed for your appliance:

Customize your new washer and dryer with the following genuine Maytag accessories. For more information on options and ordering, call **0800-258-558** or visit us at: [www.maytag.com.tw](http://www.maytag.com.tw).

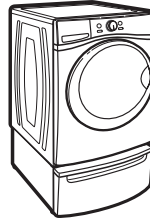

### 15" Pedestal

Color-matched pedestals raise the washer and dryer to a more comfortable working height. The large drawer provides convenient storage.

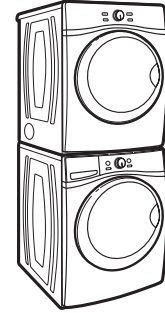

### Stack Kit


If space is at a premium, the stack kit allows the dryer to be installed on top of the washer.

# CONTROL PANEL AND FEATURES

Not all features and cycles are available on all models.

## NOTES:

- The control panel features a sensitive surface that responds to a light touch of your finger. To ensure your selections are registered, touch the control panel with your fingertip, not your fingernail. When selecting a setting or option, simply touch its name.
- At cycle completion, your setting and option choices will be remembered for your next use of that cycle. However, if power is lost to the washer, the settings and options will go back to the factory defaults.

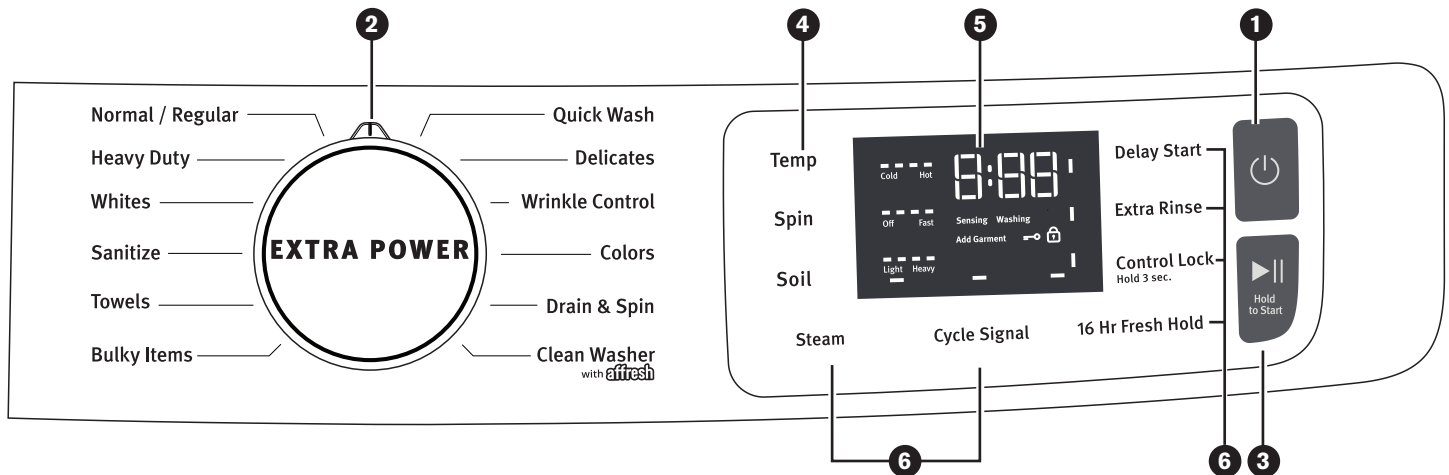

### 1 POWER

Touch to turn the washer on and off. Touch to stop/cancel a cycle at any time.

**NOTE:** Turning the Wash Cycle knob will also turn the washer on.

### 2 WASH CYCLE KNOB

Turn the knob to select a cycle for your laundry load. Press the Wash Cycle knob to enable the Extra Power option.

**NOTE:** The Clean Washer with affresh LED will flash when the washer has run 30 wash cycles as a reminder to run the Clean Washer with affresh cycle.

See “Cycle Guide” for detailed descriptions of cycles.

**NOTE:** For best results when using the Overnight Wash & Dry cycle, use for loads weighing 2 lbs or less, such as a soccer uniform or a running tank and shorts. Allow the cycle to run the full duration of 12 hours.

### EXTRA POWER

Extra Power option can be used for increased cleaning power. Press the Wash Cycle Knob to activate the Extra Power option, which runs a cold pre-wash cycle before the main cycle. When Extra Power is activated, the Cycle Control Knob will illuminate and the estimated time remaining on the display will increase. On single load dispenser models, add an extra dose of detergent to the Bleach/Detergent for Extra Power compartment when using Extra Power, for best results.

### 3 START

Touch and hold for 3 seconds until the light above START comes on to start a cycle or touch once while a cycle is in process to pause it. If you want to add a garment, you can touch START when the “Add Garment” LED is on.

### 4 LED DISPLAY AND SETTINGS

When you select a cycle, its default settings will light up and the Estimated Time Remaining will be displayed. Factors such as load size, wash temperature, and water pressure may affect the time shown in the display. Tightly packing, unbalanced loads, or excessive suds may cause the washer to lengthen the cycle time as well.

Touch the desired setting on the display to adjust. See “Cycle Guide” for available settings on each cycle. Not all settings are available with all cycles.

#### Temp

The recommended wash temperature is preset for each cycle. You may also select a wash temperature based on the type of fabric and soils being washed. For best results, use the warmest wash water safe for your fabric, following the garment label instructions. All wash temperatures feature a cold rinse.

#### Spin

This washer automatically selects the spin speed based on the cycle selected. Some preset speeds can be changed.

- Faster spin speeds mean shorter dry times but may increase wrinkling in your load.

- Slower spin speeds reduce wrinkling but will leave your load more damp.


#### Soil

Soil Level (wash time) is preset for each wash cycle. When you change the soil setting, the cycle time will increase or decrease in the Estimated Cycle Time display.

For most loads, use the soil level that is preset with the cycle you have chosen. For heavily soiled and sturdy fabrics, use the Soil Level setting to select a higher soil level. For lightly soiled and delicate fabrics, use the Soil Level setting to select a lower soil level. Lower soil level settings will help reduce tangling and wrinkling.

## 5 CYCLE STATUS LIGHTS

**NOTE:** Not all Cycle Status Lights are available on all models. The Cycle Status Lights show the progress of a cycle. At each stage of the process, you may notice sounds or pauses that are different from traditional washers.

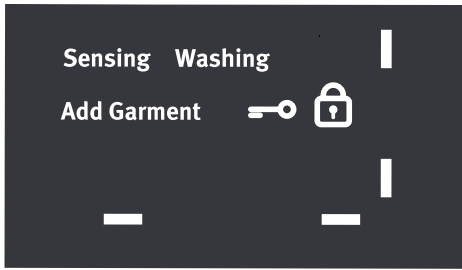

### Sensing

When START is touched and held, the washer will first perform a self-test on the door lock mechanism and the sensing light will come on. You will hear a click, the drum will make a partial turn, and the door will click again as it unlocks briefly. The door will click one more time when it locks again.

Once the door has locked the second time, the washer will begin spinning to sense the load size. This sensing process will continue throughout the cycle. You may also hear water flowing through the dispenser, adding detergent to the load.

After the load size is sensed, the estimated time based on load size will be displayed. The actual cycle time may be lengthened; however, the display will continue to show the estimated time.

The sensing light will blink once a second at various times during the cycle, such as when the washer is reducing extra suds.

### Washing

During the wash cycle, this will display to let you know the cycle is in progress.

### Add Garment

When "Add Garment" is lit, you may pause the washer, open the door, and add items. Touch and hold START to start the washer again.

### Detergent Low

When detergent in the dispenser is running low, the display will show the detergent level (Low).

## 6 OPTIONS

Touch to activate additional wash options or additional features on the washer. Not all options are available on all models.

### A Delay Start

Touch this option to delay the start of the wash cycle by up to 12 hours.

### B Fresh Hold/Fresh Spin

The Fresh Hold/Fresh Spin option will periodically tumble the load after the end of the cycle for up to 24 hours while the integrated fan circulates air through the washer to reduce humidity. Fresh Spin also periodically tumbles the load after the end of the cycle but does not use an integrated fan. To turn on the Fresh Hold/Fresh Spin option, touch FRESH HOLD. If, however, the Fresh Hold/Fresh Spin option is turned on, it will stay on for all future cycles until turned back off – the washer remembers the last on/off status set. To turn off the Fresh Hold/Fresh Spin option, touch FRESH HOLD.

To turn off the Fresh Hold/Fresh Spin option when it is running, touch POWER.

**NOTE:** The door will lock while the Fresh Hold/Fresh Spin option is active. To cancel the option and unlock the door, touch POWER.

### C Steam

The Steam option adds additional soak and wash time to many cycles to help remove tough stains as well as a steam boost for added cleaning power. An integrated heater helps to maintain optimal wash temperatures.

### D Extra Rinse

Activate this option to add an extra rinse to most cycles.

### E Cycle Signal

Touch and hold CYCLE SIGNAL for about 3 seconds the display will count down you will see "3," then "2," then "1." The display will start displaying the sound levels you will see "1," then "2," then "3," then "OFF." When the CYCLE SIGNAL is released the last value shown will be the current selection.

### F Control Lock

Touch and hold for 3 seconds to lock the controls to avoid unwanted changes or operation. Touch and hold 3 seconds again to unlock. For each second CONTROL LOCK is held down, the display will count down 1 second; you will see "3," then "2," then "1." You may still touch START to pause the cycle or touch POWER to turn off the washer.


### G Extra Power

The Extra Power option boosts stain fighting performance on any wash cycle with a dual temperature wash, combining cold and hot temperature during different phases of the wash time. To use this function press the knob to activate the Extra Power option. For single dose dispensers and an additional 1/2 the manufacturer's recommended amount into the dispenser marked for Extra Power.

## 7 DISPENSERS

### Single Load Dispenser Drawer (on some models)

The dispenser drawer gives you the convenience of adding HE detergent, liquid chlorine bleach, and liquid fabric softener to the wash load at the proper time. See "Using the Dispenser Drawer" for information on using the dispenser drawer.

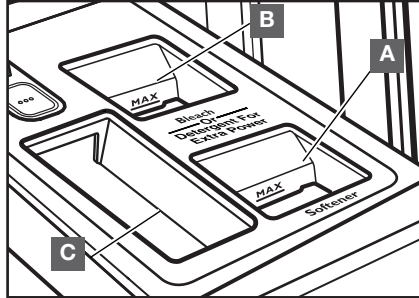

#### A Liquid fabric softener compartment

Automatically dilutes and dispenses liquid fabric softener at the optimum time in the cycle.

■ Use only liquid fabric softener in this dispenser.

#### B Liquid chlorine bleach compartment

Automatically dilutes and dispenses liquid chlorine bleach at the optimum time during the first rinse after the wash cycle. This compartment cannot dilute powdered bleach. On single load dispenser models, use this compartment to add an extra dose of detergent when using the Extra Power option.

#### C Liquid High Efficiency "HE" detergent compartment

This compartment holds liquid or powdered HE detergent for your main wash cycle.

## CYCLE GUIDE


Settings and options shown in **bold** are default settings for that cycle. For best fabric care, choose the cycle, options, and settings that best fit the load being washed. Not all settings are available with each cycle and some options cannot be used together.


Not all cycles and options are available on all models.


### Load Size Recommendations





For best results, follow the load size recommendations noted for each cycle.

 **Small load:** Fill the washer drum with 3–4 items, not more than 1/4 full.

 **Medium load:** Fill the washer drum up to about 1/2 full.

 **Large load:** Fill the washer drum up to about 3/4 full.

 **Extra-large load:** Fill the washer drum, but make sure clothes can tumble freely. For best results, avoid packing tightly.

Items to wash using default cycle settings:	Cycle:	Wash Temperature*	Spin Speed***	Soil Level:	Options/Modifiers:	Cycle Details:
Normally soiled cottons, linens, sheets, and mixed garment loads	Normal	Cold Cool <b>Warm</b> Very Warm Hot	Off Medium Med Fast <b>Fast</b>	Light <b>Medium</b> Med Heavy Heavy	Steam** Extra Rinse Fresh Hold/Fresh Spin Extra power	 This cycle combines medium-speed tumbling and an extra-high-speed spin. This cycle is designed to provide the most energy efficiency.
Sturdy colorfast fabrics and heavily soiled garments	Heavy Duty	Cold Cool Warm <b>Very Warm</b> Hot	Off Slow Medium Med Fast <b>Fast</b>	Light Medium Med Heavy <b>Heavy</b>	Steam** Extra Rinse Fresh Hold/Fresh Spin Extra power	 Fast-speed tumbling and an extra-fast-speed final spin help provide optimal cleaning and reduce drying times.
Heavily soiled white fabrics and garments	Whites	Cold Cool Warm <b>Very Warm</b> Hot	Off Slow Medium Med Fast <b>Fast</b>	<b>Light</b> Medium Med Heavy Heavy	Steam** Extra Rinse Fresh Hold/Fresh Spin Extra power	 Uses a longer wash time with fast-speed tumbling, extra rinsing, and an extra-fast-speed spin to provide optimal cleaning and rinsing when bleach is used.
Sturdy towels and wash cloths	Towels	Cold Cool Warm <b>Very Warm</b> Hot	Off Slow Medium Med Fast <b>Fast</b>	<b>Light</b> Medium Med Heavy Heavy	Steam** Extra Rinse Fresh Hold/Fresh Spin Extra power	 Provides fast-speed tumbling, longer wash time, normal rinsing, and an extra-fast-speed spin to shorten drying time.







Continued on next page

\*All temperature selections feature a Cold rinse.

\*\*The Steam option is only available when a Warm, Very Warm, or Hot water temperature is selected.

\*\*\*Spin speed varies by model.





Items to wash using default cycle settings:	Cycle:	Wash Temperature*	Spin Speed***	Soil Level:	Options/Modifiers:	Cycle Details:
Large items such as sleeping bags, small comforters, jackets	Bulky Items	Cold Cool <b>Warm</b> Very Warm Hot	Off Slow Medium Med Fast <b>Fast</b>	<b>Light</b> Medium Med Heavy Heavy	Steam** Extra Rinse Fresh Hold/Fresh Spin Extra power	 Use this cycle to wash large items such as jackets and small comforters. The washer will fill with enough water to wet down the load before the wash portion of the cycle begins. Do not tightly pack basket.
Small loads of 2-4 lightly soiled garments	Quick Wash	Cold Cool <b>Warm</b> Very Warm Hot	Off Slow Medium Med Fast <b>Fast</b>	<b>Light</b> Medium Med Heavy Heavy	Steam** Extra Rinse Fresh Hold/Fresh Spin Extra power	 For small loads (2-4 items) needed quickly. This cycle combines fast-speed tumbling, a shortened wash time, and an extra-fast-speed spin for reduced drying times.
Sheer fabrics, lingerie, sweaters, and lightly soiled shirts, blouses, trousers, pants, and skirts	Delicates	<b>Cold</b> Cool Warm Very Warm Hot	Off <b>Slow</b> Medium Med Fast Fast	<b>Light</b> Medium Med Heavy Heavy	Steam** Extra Rinse Fresh Hold/Fresh Spin Extra power	 This cycle combines slow-speed tumbling and slow-speed spin for gentle fabric care and reduced wrinkling.
Lightly soiled shirts, blouses, trousers, pants, and dresses	Wrinkle Control	Cold Cool <b>Warm</b> Very Warm Hot	Off Slow <b>Medium</b> Med Fast Fast	<b>Light</b> Medium Med Heavy Heavy	Steam** Extra Rinse Fresh Hold/Fresh Spin Extra power	 This cycle combines low-speed tumbling and medium-speed spin for gentle fabric care and reduced wrinkling.
Clothing, bedding and towels requiring sanitization	Sanitize	<b>Hot</b>	Off Slow Medium Med Fast <b>Fast</b>	Light Medium <b>Med Heavy</b> Heavy	Steam** Extra Rinse Fresh Hold/Fresh Spin Extra power	 This cycle eliminates 99.99% of the most common bacteria found in clothes, sheets, and towels. The extra hot wash temperature ensures sanitization. Check recommended wash temperature of your items. Bacteria tested were K. pneumonia, P. aureginosa, and S. aureus.
Bright or darkly colored cottons, linens, casual and mixed loads	Colors	<b>Cold</b>	Off Medium Med Fast <b>Fast</b>	Light <b>Medium</b> Med Heavy Heavy	Extra Rinse Fresh Hold/Fresh Spin Extra power	 Cold water with an additional wash action gently lifts stains while caring for fabrics. Settings may be adjusted as desired, but must use only cold water settings.

Continued on next page

\*All temperature selections feature a Cold rinse.

\*\*The Steam option is only available when a Warm, Very Warm, or Hot water temperature is selected.

\*\*\*Spin speed varies by model.

Items to wash using default cycle settings:	Cycle:	Wash Temperature*	Spin Speed***	Soil Level:	Options/Modifiers:	Cycle Details:
2–4 lightly soiled synthetic garments, athletic uniforms, or workout wear	Overnight Wash & Dry	Cold Cool <b>Warm</b> Very Warm Hot	<b>Fast</b>	<b>Light</b> Medium Med Heavy Heavy	Steam** Extra Rinse <b>Fresh Hold/Fresh Spin</b> Extra power	 This short wash cycle has an extra-high-speed spin followed by intermittent tumbling and fan activation to circulate air through the clothes.
Wet load of clothes	Drain & Spin	N/A	Off Slow Medium Med Fast <b>Fast</b>	N/A	Extra Rinse Fresh Hold/Fresh Spin	 Use Drain & Spin to remove excess water from the load. Spin speed can be set to a lower setting.
No clothes in washer	Clean Washer with affresh	N/A	N/A	N/A	N/A	Use this cycle every 30 washes to keep the inside of your washer fresh and clean. This cycle uses a higher water level. Use with affresh washer cleaner tablet or liquid chlorine bleach to thoroughly clean the inside of your washer. This cycle should not be interrupted. See “Washer Care.” <b>IMPORTANT:</b> Do not place garments or other items in the washer during the Clean Washer with affresh cycle. Use this cycle with an empty wash tub. See “Washer Care” in “Washer Maintenance.”

\*All temperature selections feature a Cold rinse.

\*\*The Steam option is only available when a Warm, Very Warm, or Hot water temperature is selected.

\*\*\*Spin speed varies by model.

## CHOOSING THE RIGHT DETERGENT

Use only High Efficiency detergents. The package will be marked “HE” or “High Efficiency.” Low-water washing creates excessive sudsing with a non-HE detergent. Using non-HE detergent will likely result in longer cycle times and reduced rinsing performance. It may also result in component failure and, over time, buildup of mold or mildew. HE detergents should be low-sudsing and quick-dispersing to produce the right amount of suds for the best performance. They should hold soil in suspension so it is not redeposited onto clean clothes. Not all detergents labeled as High Efficiency are identical in formulation and their ability to reduce suds. For example, natural, organic, or homemade HE detergents may generate a high level of suds. If you use one of these and see an “Sd” or “Sud” error code appear in the display, consider using a different HE detergent. Always follow the detergent manufacturer’s instructions to determine the amount of detergent to use. Do not go over the Max line on the dispenser.



Use only High Efficiency (HE) detergent.

## About Detergent Dosing

If you do not get your desired cleaning results, try using a larger amount of detergent. If you have excess suds, try using less detergent.

### NOTES:

- A small amount of water may remain in the dispensers from the previous wash cycle. This is normal.
- To add single-dose and Oxi-type boosters, see the “Using Your Washer” section.

# USING YOUR WASHER

## ⚠️ WARNING



### Fire Hazard

Never place items in the washer that are dampened with gasoline or other flammable fluids.

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Doing so can result in death, explosion, or fire.

## ⚠️ WARNING



### Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.


Failure to follow these instructions can result in death, fire, or electrical shock.

## First wash cycle without laundry

Before washing clothes for the first time, add liquid or powdered HE detergent to the detergent dispenser. Choose the Quick Wash cycle and run it without clothes. Use only HE detergent. This initial cycle serves to ensure the interior is clean and the dispenser drawer is ready for use before washing clothes.

- Turn knits inside out to prevent pilling. Separate lint-takers from lint-givers. Synthetics, knits, and corduroy fabrics will pick up lint from towels, rugs, and chenille fabrics.
- Do not dry garments if stains remain after washing because heat can set stains into fabric.
- Always read and follow fabric care labels and laundry product instructions. Improper usage may cause damage to your garments.

## 1. Sort and prepare your laundry

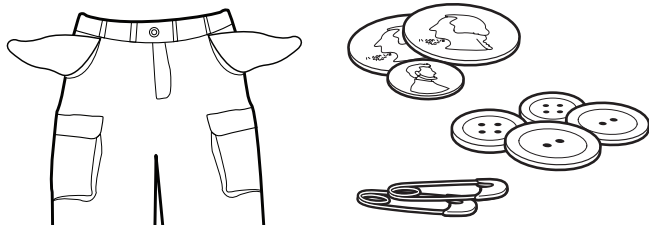


Sort items by recommended cycle, water temperature, and colorfastness. Separate heavily soiled items from lightly soiled. Separate delicate items from sturdy fabrics. Treat stains promptly and check for colorfastness by testing stain remover products on an inside seam.

### IMPORTANT:

- Empty pockets. Loose change, buttons, or any small object can plug pumps and may require a service call.
- Close zippers, fasten hooks, tie strings and sashes, and remove non-washable trim and ornaments.
- Mend rips and tears to avoid further damage to items during washing.


## 2. Add laundry products (if desired)

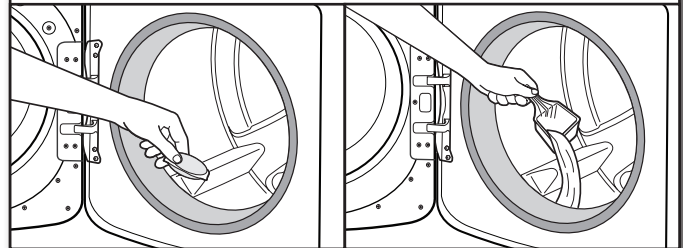

Single-dose laundry packets, Oxi-type boosters, color-safe bleach, or fabric softener crystals can be added to the drum prior to adding laundry.

**NOTE:** Always follow manufacturer's instructions.

### 3. Load laundry into washer

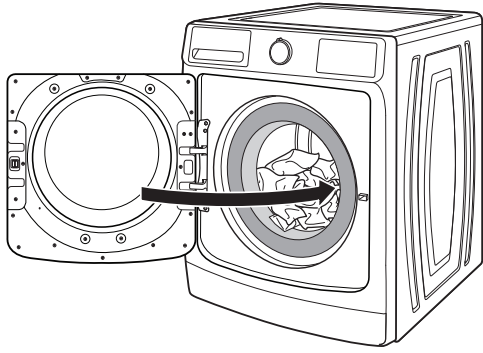


Place a load of sorted items loosely in the washer. Items need to move freely for best cleaning and to reduce wrinkling and tangling. Close the washer door by pushing it firmly until the latch clicks.

- Depending on load type and cycle, the washer can be fully loaded but not tightly packed. Washer door should close easily. See "Cycle Guide" for loading suggestions.
- Mix large and small items and avoid washing single items. Load evenly.
- Wash small items in mesh garment bags. For multiple items, use more than one bag and fill bags equally.

### 4. Add HE detergent

#### Single Load Dispenser Drawer

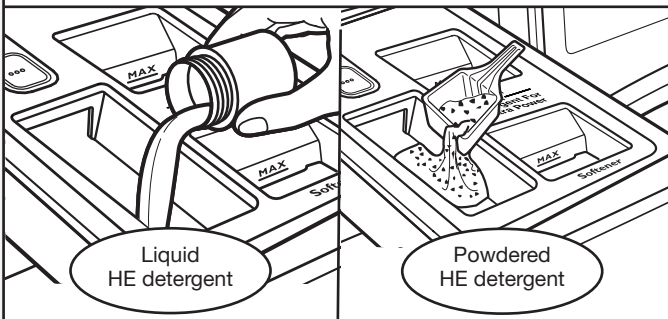


Adjust the selector, based on type of HE detergent used (either liquid or powdered). See "Using the Dispenser Drawer" section on how to use the dispenser.

- Push load fully into washer. Make sure no items are resting on the rubber seal to avoid trapping them between the seal and the door glass.

**NOTE:** Do not add single-dose laundry packets, Oxi-type boosters, color-safe bleach, or fabric softener crystals to dispensers. They will not dispense correctly.

### 5. Add liquid fabric softener to dispenser (if desired)

#### Single Load Dispenser Drawer

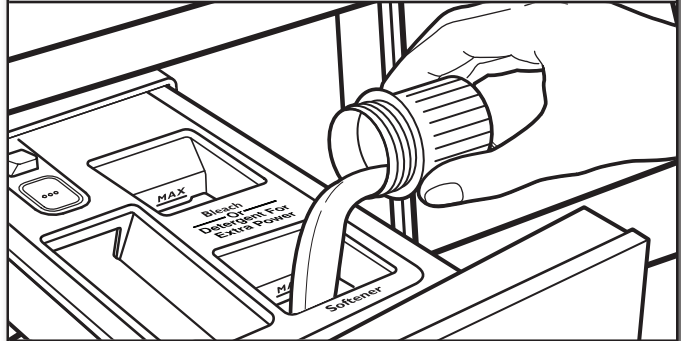

Pour a measured amount of liquid fabric softener into liquid fabric softener compartment. Always follow manufacturer's directions for correct amount of fabric softener based on your load size.


Fabric softener is always dispensed in the last rinse, even if Extra Rinse is selected.

**IMPORTANT:** Do not overfill, dilute, or use more than manufacturer's recommendation for dosing of fabric softener. Do not fill past the Max line. Overfilling dispenser will cause fabric softener to immediately dispense into washer.

- Do not spill or drip any fabric softener onto the clothes.
- Do not use liquid fabric softener dispenser balls in this washer. They will not dispense correctly.

### 6. Add liquid chlorine bleach to dispenser (if desired)

#### Single Load Dispenser Drawer

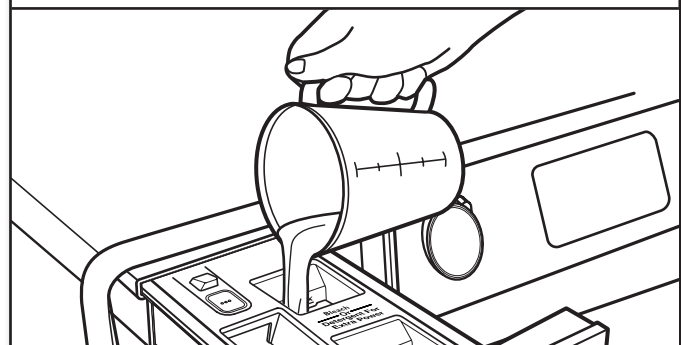

Add liquid chlorine bleach to the bleach compartment. Do not overfill, dilute, or use more than manufacturer's recommendation for dosing. Do not use color-safe bleach or Oxi in the same cycle with liquid chlorine bleach.

**IMPORTANT:**


- Always measure liquid chlorine bleach. Use a measuring cup with a pour spout; do not guess.
- Do not fill beyond the Max level. Overfilling could cause garment damage.
- Do not use thickened, easy-pour, or no-splash bleach when running the Clean Washer with affresh cycle as excess suds may occur.

## 7. Touch POWER to turn on washer



Slowly close the Dispense drawer. Make sure the drawer is closed completely, then touch POWER to turn on the washer or go to Step 8.

## 8. Select CYCLE\*

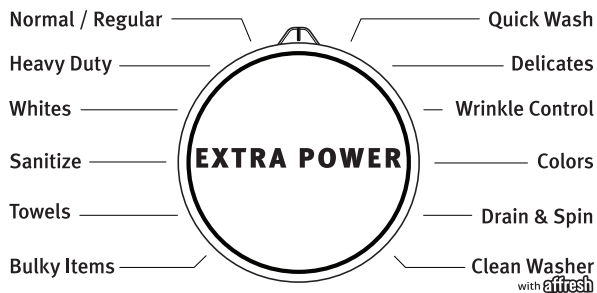

Turn cycle knob to select your wash cycle. See "Cycle Guide" for details on cycle features. Press the knob for enabling the Extra Power option.

The Extra Power option boosts stain fighting performance on any wash cycle with a dual temperature wash, combining cold and hot temperature during different phases of the wash time. Press the knob to select this option.

## 9. Adjust settings, if desired\*

Temp

— — — —  
Cold Hot

Spin

— — — —  
Off Fast

Soil

— — — —  
Light Heavy  
—

The display will show the default settings for the selected cycle. To adjust a setting, touch its name – Temp, Spin or Soil. Adjusting settings will change the Estimated Cycle Time. Tightly packing the load, unbalanced loads, or excessive suds may also cause the washer to increase the cycle time.

## 10. Select any additional options\*

Delay Start

Extra Rinse

Control Lock  
Hold 3 sec.

Steam

Cycle Signal

16 Hr Fresh Hold

To add an option to the cycle, touch its name – Fresh Hold, Steam, Extra Rinse, Cycle Signal, or Control Lock. To remove an option from the selected cycle, touch the option again.

## 11. Set a delayed wash

# Delay Start

If you do not want to begin a cycle immediately, you may choose the Delay Hrs. option. This will delay the start of the wash cycle by up to 12 hours.

**To set a delayed wash:**

1. Touch SELECT Delay Start to set the desired delay time.
2. Touch and hold START to start the delay countdown. The countdown stops blinking.

\*Not all options and settings are available with all cycles. See "Cycle Guide" for available options and settings.

## 12. Touch and hold START to begin wash cycle



Touch and hold START to start the wash cycle. To pause a cycle in progress, touch START once, then touch and hold again to continue the cycle. To cancel a cycle, touch POWER.

Once you touch and hold START, you will hear the door lock, unlock, and lock again. The washer door will remain locked during the wash cycle.

### Unlocking the door to add garments:

If you need to open the door to add 1 or 2 missed garments, you may do so while the "Add Garment" light is lit. The time allowed to add a garment will vary based on cycle selection and load size.

Touch START once; the door will unlock once the washer movement has stopped. This may take several minutes. Then close the door and touch and hold START again to restart the cycle.

### Adding items after "Add Garment" light is off:



Cancel current cycle. Water will drain and you will need to reselect cycle and restart.

For wash performance and optimal energy savings, add garments only when the "Add Garment" light is on.

Add Garment



## 13. Remove garments promptly after cycle is finished

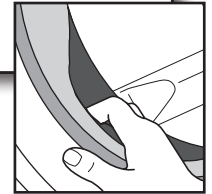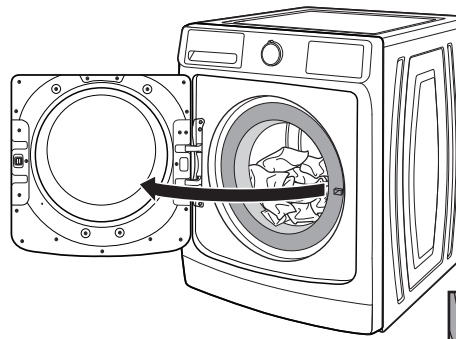

Promptly remove garments after cycle has completed to avoid odor and rusting of metal objects on garments. When unloading garments, pull back the door seal and check for small items between the tub and the washer drum.

If you will be unable to remove the load promptly, use the Fresh Hold/Fresh Spin option. If the Fresh Hold/Fresh Spin option is selected, the washer will automatically activate the fan and tumble the load periodically for up to 16 hours. To turn off the Fresh Hold/Fresh Spin option, touch POWER. To set the washer so that the Fresh Hold/Fresh Spin option does not come on for future cycles, touch FRESH HOLD.

16 Hr Fresh Hold

### NOTES:

- The door will remain locked while the Fresh Hold/Fresh Spin option is active. To cancel the option and unlock the door, touch POWER.
- A small amount of water may remain in the dispensers after the wash cycle is complete. This is normal.
- This washer has a tight seal to avoid water leaks. To avoid odors, leave the door open to allow the washer to dry between uses.

# WASHER MAINTENANCE

## WATER INLET HOSES

Replace inlet hoses after 5 years of use to reduce the risk of hose failure. Periodically inspect and replace inlet hoses if bulges, kinks, cuts, wear, or leaks are found.

When replacing your inlet hoses:

- Mark the date of replacement on the label with a permanent marker.
- Check that the old washers are not stuck on the washer inlet valves.
- Use new washers in the new inlet hoses to ensure a proper seal.

## WASHER CARE

### Recommendations to Help Keep Your Washer Clean and Performing at Its Best

1. Always use High Efficiency (HE) detergents and follow the HE detergent manufacturer's instructions regarding the amount of HE detergent to use. Never use more than the recommended amount because that may increase the rate at which detergent and soil residue accumulate inside your washer which, in turn, may result in undesirable odor.
2. Use warm or hot water washes sometimes (not exclusively cold water washes) because they do a better job of controlling the rate at which soils and detergent accumulate.
3. Always leave the washer door slightly ajar between uses to help dry out the washer and avoid the buildup of odor-causing residue.
4. Periodically clean residue from all interior surfaces of the glass window. For better care, wipe the entire inside of the glass door with a damp cloth.

### Cleaning Your Front-Loading Washer

Read these instructions completely before beginning the routine cleaning processes recommended below. This Washer Maintenance Procedure should be performed, at a minimum, once per month or every 30 wash cycles, whichever occurs sooner, to control the rate at which soils and detergent may otherwise accumulate in your washer.

#### Cleaning the Door Seal

1. Open the washer door and remove any clothing or items from the washer.
2. Inspect the gray-colored seal between the door opening and the drum for stained areas or soil buildup. Pull back the seal to inspect all areas under the seal and to check for foreign objects.

## WASHER CARE (cont.)

3. If stained areas or soil buildup is found, wipe down these areas of the seal using either of the following two procedures:
  - a. **affresh Machine Cleaning Wipes Procedure:**
    - i. When the cycle is complete, gently pull back the rubber door seal and clean the entire surface with the textured side of an affresh Machine Cleaning Wipe.
  - b. **Dilute Liquid Chlorine Bleach Procedure:**
    - i. Mix a dilute bleach solution, using 3/4 cup (177 mL) of liquid chlorine bleach and 1 gallon (3.8 L) of warm tap water.
    - ii. Wipe the seal area with the dilute solution, using a damp cloth.
    - iii. Let stand 5 minutes.
    - iv. Wipe down area thoroughly with a dry cloth and let washer interior air dry with door open.

#### IMPORTANT:

- Wear rubber gloves when cleaning with bleach.
- Refer to the bleach manufacturer's instructions for proper use.

#### Cleaning the Inside of the Washer

This washer has a special cycle that uses higher water volumes in combination with affresh Washer Cleaner or regular liquid chlorine bleach to thoroughly clean the inside of the washer. Steam washer models also utilize steam to enhance cleaning in this special cycle.

**IMPORTANT:** Do not use thickened, easy-pour, or no-splash bleach when running the Clean Washer with affresh cycle as excess suds may occur.

**NOTE:** Read these instructions completely before beginning the cleaning process.

## WASHER CARE (cont.)

### Begin Procedure

#### 1. Clean Washer with affresh Cycle Procedure (Recommended for Best Performance):

- a. Open the washer door and remove any clothing or items.
- b. Use an affresh Machine Cleaning Wipe or a soft, damp cloth or sponge to clean the inside door glass.
- c. Add an affresh Washer Cleaner tablet to the washer drum.
- d. Do not add the affresh Washer Cleaner tablet to the dispenser drawer.
- e. Do not add any detergent or other chemical to the washer when following this procedure.
- f. Close the washer door.
- g. Select the Clean Washer with affresh cycle.
- h. **On some models:** Select the Fresh Hold/Fresh Spin option to help dry the washer interior after the cycle is complete.  
**NOTE:** The washer remembers your last option selection and will use it for future wash cycles until you deselect that option. While the fan is ON, the washer door will lock. To unlock the door, touch POWER.
- i. Touch and hold START to begin the cycle. The Clean Washer with affresh Cycle Operation is described below.

#### 2. Chlorine Bleach Procedure:

- a. Open the washer door and remove any clothing or items.
- b. Open the dispenser drawer and add regular liquid chlorine bleach to the MAX level in both the bleach compartment and the fabric softener compartment. Either traditional or HE chlorine bleach can be used.

**IMPORTANT:** Do not use thickened, easy-pour, or no-splash bleach as excess suds may occur.

**NOTE:** Use of more liquid chlorine bleach than is recommended above could cause washer damage over time.

- c. Close the washer door and the dispenser drawer.
- d. Do not add any detergent or other chemicals to the washer when following this procedure.
- e. Select the Clean Washer with affresh cycle.
- f. **On some models:** Select the Fresh Hold/Fresh Spin option to help dry the washer interior after the cycle is complete.  
**NOTE:** The washer remembers your last option selection and will use it for future wash cycles until you deselect that option. While the fan is ON, the washer door will lock. To unlock the door, touch POWER.
- g. Touch and hold START to begin the cycle. The Clean Washer with affresh Cycle Operation is described below.

**NOTE:** For best results, do not interrupt cycle.

## WASHER CARE (cont.)

### Description of Clean Washer with affresh Cycle Operation:

1. The Clean Washer with affresh cycle will determine whether clothing or other items are in the washer.
2. If no items are detected in the washer, it will proceed with the cycle.
  - a. If any items are detected in the washer, "rL" (remove load) will be displayed. The door will unlock. Open washer and remove any garments from the washer drum.
  - b. Touch POWER to clear the "rL" code.
  - c. Touch and hold START to restart the cycle.
3. **Steam models only:** During the first 20 minutes of the cycle, it will activate the steamer but the drum will not spin or fill with water. You may see condensation on the door glass during this initial phase. If you are using an affresh Washer Cleaner tablet, it will not dissolve completely during the steam phase. This is normal.

After the cycle is complete, leave the door open slightly to allow for better ventilation and drying of the washer interior.

### Cleaning the Dispensers

After a period of using your washer, you may find some residue buildup in the washer's dispensers. To remove residue from the dispensers, remove the drawer and wipe the surfaces with an affresh Machine Cleaning Wipe or a damp cloth and towel dry either before or after you run the Clean Washer with affresh cycle. Use an all-purpose surface cleaner, if needed.

**IMPORTANT:** Dispenser is not dishwasher safe.

### Cleaning the Outside of the Washer

Use an affresh Machine Cleaning Wipe or a soft, damp cloth or sponge to wipe up any spills. Occasionally wipe the outside of your washer to help keep it looking new. Use an affresh Machine Cleaning Wipe or mild soap and water.

**IMPORTANT:** To avoid damaging the washer's finish, do not use abrasive products.

## CLEAN WASHER CYCLE REMINDER

**NOTE:** Not all models have the Clean Washer with affresh cycle reminder light.

The Clean Washer with affresh LED will flash at the end of a wash cycle when the washer has run 30 wash cycles. This is a reminder to run the Clean Washer with affresh cycle.



If the Clean Washer with affresh cycle is not turned on, the LED will stop flashing at the end of a wash cycle after running 3 more regular wash cycles. After 30 more wash cycles are completed, the Clean Washer with affresh LED will again flash at the end of a wash cycle as a reminder.




## REMOVING THE DISPENSER

### Single Load Dispenser Drawer


#### Removing the Dispenser

##### To remove:

1. Pull dispenser drawer out until it stops.
2. Press down on the release tab and pull straight out to remove the dispenser.

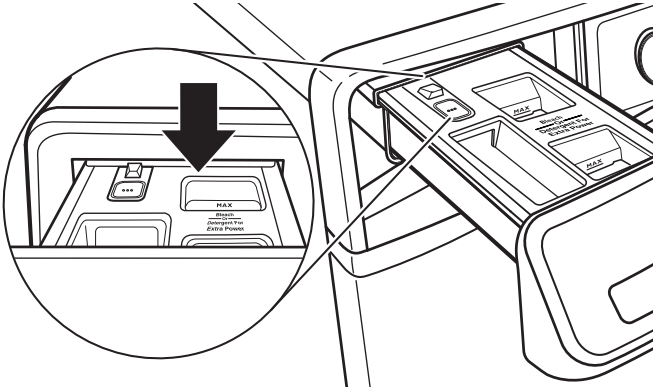

3. Lift off cover panel by pulling straight up.

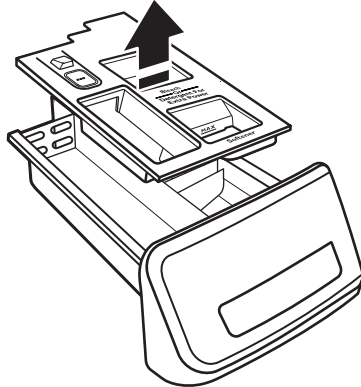


## REMOVING THE DISPENSER (cont.)

### Single Load Dispenser Drawer (cont.)

#### To replace:

1. Slide cover panel back onto posts on dispenser.
2. Align edges of dispenser with guides in washer, then slide dispenser back into slot.

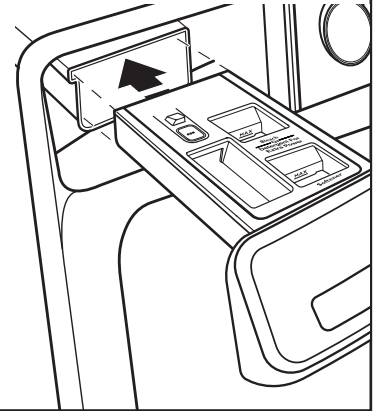

## NON-USE AND VACATION CARE

Operate your washer only when you are home. If moving, or not using your washer for a period of time, follow these steps:

1. Unplug or disconnect power to washer.
2. Turn off water supply to washer to avoid flooding due to water pressure surges.

**HELPFUL TIP:** Attach a reminder note to the washer to turn the water back on before washer's next use.

3. Clean the dispensers. See "Cleaning the Dispensers."

## WINTER STORAGE CARE

**IMPORTANT:** To avoid damage, install and store washer where it will not freeze. Because some water may stay in hoses, freezing can damage washer. If storing or moving during freezing weather, winterize your washer.

**To winterize washer:**

1. Shut off both water faucets, then disconnect and drain water inlet hoses.

**HELPFUL TIP:** Attach a reminder note to the washer to turn the water back on before washer's next use.

2. Put 1 qt (1 L) of R.V.-type antifreeze in washer drum and run washer on Normal cycle for about 2 minutes to mix antifreeze and remaining water.
3. Unplug washer or disconnect power.

## TRANSPORTING YOUR WASHER

1. Shut off both water faucets. Disconnect and drain water inlet hoses.
2. If washer will be moved during freezing weather, follow "Winter Storage Care" directions before moving.
3. Disconnect drain hose from drain system and from back of washer.
4. Unplug power cord.
5. Place inlet hoses and drain hose inside washer drum.
6. Bundle power cord with a rubber band or cable tie to keep it from hanging onto the ground.

**IMPORTANT:** Call for service to install new transport bolts. Do not reuse transport bolts. Washer must be transported in the upright position. To avoid structural damage to your washer, it must be properly set up for relocation by a certified technician.

## ⚠ WARNING



### Electrical Shock Hazard

**Plug into a grounded 3 prong outlet.**

**Do not remove ground prong.**

**Do not use an adapter.**

**Do not use an extension cord.**

**Failure to follow these instructions can result in death, fire, or electrical shock.**

## REINSTALLING/USING WASHER AGAIN

To reinstall washer after non-use, vacation, winter storage, or moving:

1. Refer to Installation Instructions to locate, level, and connect washer.
2. Before using again, run washer through the following recommended procedure:

**To use washer again:**

1. Flush water pipes and hoses. Reconnect water inlet hoses. Turn on both water faucets.
2. Plug in washer or reconnect power.
3. Run washer through Power Wash cycle to clean washer and remove antifreeze, if used. Use only HE detergent. Use half the manufacturer's recommended amount for a medium-size load.

# TROUBLESHOOTING

First try the solutions suggested here or visit our website at [www.maytag.com.tw](http://www.maytag.com.tw).

If you experience	Possible Causes	Solution
<b>Error Code Appears in Display (for 2- and 3-digit displays)</b>		
Once any possible issues are corrected, touch POWER once to clear the code. Reselect and restart the cycle.		
"Sd" or "Sud" (excess suds) appears in display	Excessive suds in washer. Washer is running a suds-reduction routine.	Allow the washer to continue. Use only HE detergent. Always follow the detergent manufacturer's instructions to determine the amount of detergent to use and base detergent quantity on load size. Not all detergents labeled as High Efficiency are identical in formulation and their ability to reduce suds. For example, natural, organic, or homemade HE detergents may generate a high level of suds. If you use one of these and see an "Sd" or "Sud" error code appear in the display, consider using a different HE detergent.
Lo followed by FL or F8 followed by E1 or Lo followed by FL or F08 followed by E01 (water supply error) appears in display	Check for proper water supply.	Unit will drain for 8 minutes while door remains locked. The drain cycle must be allowed to complete or the error code cannot reset. When complete, touch POWER once to clear the code. Then touch POWER again to restart washer. If code appears again, call for service.
		Both hoses must be attached and have water flowing to the inlet valve.
		Both hot and cold water faucets must be ON.
		Inlet valve screens on washer may be clogged.
		Remove any kinks in the inlet hose.
Check for proper inlet hoses.	If used, auto shut-off connectors and hoses must be properly installed and in working order.	
F9 followed by E1 or F09 followed by E01 (drain pump system error) appears in display	Check plumbing for correct drain hose installation. Drain hose extends into standpipe farther than 4½" (114 mm).	Check drain hose for proper installation.
		Make sure the drain hose is not kinked, pinched, or blocked.
		Remove any clogs from drain hose.
		Use drain hose form and securely attach to drainpipe or tub.
Not using HE detergent or using too much HE detergent.	Lower drain hose if the end is higher than 96" (2.4 m) above the floor.	
F5 followed by E2 or F05 followed by E02 (door will not lock) appears in display	Washer door not locking.	Use only HE detergent. Always measure detergent and follow manufacturer's directions based on load size and soil level.
"rL" (remove load) appears in display	Load detected in drum during Clean Washer with affresh cycle.	Touch POWER to cancel the cycle. Check that the door is closed completely and latching. Check for items in the washer drum that may be keeping the door from closing completely.
		Remove items from washer drum and restart Clean Washer with affresh cycle.

# TROUBLESHOOTING

First try the solutions suggested here or visit our website at [www.maytag.com.tw](http://www.maytag.com.tw).

If you experience	Possible Causes	Solution
<b>Error Code Appears in Display (for 2- and 3-digit displays) (cont.)</b>		

## **⚠ WARNING**



### **Electrical Shock Hazard**

**Plug into a grounded 3 prong outlet.**

**Do not remove ground prong.**

**Do not use an adapter.**

**Do not use an extension cord.**

**Failure to follow these instructions can result in death, fire, or electrical shock.**

F# E# or F## E## code other than as described above appears in display	System error code.	Touch POWER once to clear the code. Then touch POWER again to restart washer. If code appears again, call for service. Unplug washer for 30 seconds, then plug back in.
Washer making error beeps	Door has not been opened and closed for at least 3 cycles.	This code may occur when the washer is first turned on. Open and close the door to clear the display.
Washer beeps when START is touched	Door not closed.	Close the door completely.
Clean Washer LED flashing at end of wash cycle (on some models)	The washer has run 30 wash cycles and is indicating a reminder to run the Clean Washer with affresh cycle.	Run the Clean Washer with affresh cycle. If the Clean Washer with affresh cycle is not turned on, the LED will stop flashing at the end of a wash cycle after running 3 more regular wash cycles. After 30 more wash cycles are completed, the Clean Washer with affresh LED will again flash at the end of a wash cycle as a reminder.

# TROUBLESHOOTING

First try the solutions suggested here or visit our website at [www.maytag.com.tw](http://www.maytag.com.tw).

If you experience	Possible Causes	Solution
<b>Vibration or Off-Balance</b>		
Vibration, rocking, or "walking"	Feet may not be in contact with the floor and locked.	Front and rear feet must be in firm contact with floor and washer must be level to operate properly. Jam nuts must be tight against the bottom of the cabinet.
	Washer may not be level.	Check floor for flexing or sagging. If flooring is uneven, a 3/4" (19 mm) piece of plywood under your washer will reduce sound. Do not install washer on a raised wooden platform. See "Level the Washer" in Installation Instructions.
	Load could be unbalanced or too large.	Avoid tightly packing the load. Avoid washing single items. Balance a single item such as a rug or jeans jacket with a few extra items.
		Item or load is not suitable for selected cycle. See "Cycle Guide" and "Using Your Washer."
	The shipping bolts are still in the back of the washer.	See "Remove transport bolts from washer" in the Installation Instructions.
<b>Noises</b>		
Clicking or metallic noises	Door locking or unlocking.	The door will lock, unlock, and lock again. You will hear 3 clicks after touching and holding START. This is normal.
	Objects caught in washer drain system.	Empty pockets before washing. Loose items such as coins could fall between washer drum and tub or may block pump. It may be necessary to call for service to remove items.
		It is normal to hear metal items on clothing, such as metal snaps, buckles, or zippers, touch against the stainless steel drum.
Gurgling or humming	Washer may be draining water.	The pump may make a humming sound with periodic gurgling or surging as final amounts of water are removed during the spin/drain cycles. This is normal at certain stages of the cycle.
Rolling or sloshing and occasional clicking (on slow-speed spin)	Steel balls in the balancing system are balancing the load.	This is normal at certain stages of the cycle.
<b>Water Leaks</b>		
Check the following for proper installation	Fill hoses not attached tightly.	Tighten fill-hose connection.
	Fill-hose washers.	Properly seat all four fill-hose flat washers.
	Drain hose connection.	Check that the drain hose is properly secured to drainpipe or laundry tub.
	Check household plumbing for leaks or clogged sink or drain.	Water can back up out of a clogged sink or drainpipe. Check all household plumbing for leaks (laundry tubs, drain pipe, water pipes, and faucets).
	Strainer (or nylon stocking) on end of drain hose is clogged.	Remove strainer/nylon stocking from drain hose.

# TROUBLESHOOTING

First try the solutions suggested here or visit our website at [www.maytag.com.tw](http://www.maytag.com.tw).

If you experience	Possible Causes	Solution
<b>Water Leaks (cont.)</b>		
Water or suds leaking from door or rear of cabinet	Not using HE detergent or using too much HE detergent.	Only use HE detergent. Suds from regular detergents can cause leaking from the door or rear of cabinet. Always measure detergent and follow manufacturer's directions based on your load requirements.
	Using thickened, easy-pour, or no-splash bleach when running the Clean Washer with affresh cycle.	Use affresh tablet or regular, non-thickened chlorine bleach when running the Clean Washer with affresh cycle.
	Residue on door glass.	Periodically clean the underside of the glass window to avoid potential leaks.
	Door opened during "Add Garment."	Water can drip off the inside of the door when the door is opened after the start of a cycle.
Leaking around door	Hair, lint, or other debris on inner door glass preventing proper seal with rubber door seal.	Clean inner door glass and seal. See "Cleaning the Door Seal" in the "Washer Maintenance" section.
<b>Washer not performing as expected</b>		
Load not completely covered in water	Water level not visible on door or does not cover clothes.	This is normal for an HE front-load washer. The washer senses load sizes and adds the correct amount of water for optimal cleaning.
Washer won't run or fill; washer stops working	Check for proper water supply.	Both hoses must be attached and have water flowing to the inlet valve.
		Both hot and cold water faucets must be turned on.
		Check that inlet valve screens have not become clogged.
		Check for any kinks in inlet hoses, which can restrict water flow.

## ⚠ WARNING



### Electrical Shock Hazard

**Plug into a grounded 3 prong outlet.**

**Do not remove ground prong.**

**Do not use an adapter.**

**Do not use an extension cord.**

**Failure to follow these instructions can result in death, fire, or electrical shock.**

Washer won't run or fill; washer stops working (cont.)	Check proper electrical supply.	Plug power cord into a grounded 3 prong outlet.
		Do not use an extension cord.
		Ensure there is power to outlet.
		Do not plug into a GFCI (Ground Fault Circuit Interrupter).
		Check electrical source or call an electrician to check if voltage is low.
		Reset a tripped circuit breaker. Replace any blown fuses.
		<b>NOTE:</b> If problems continue, contact an electrician.

# TROUBLESHOOTING

First try the solutions suggested here or visit our website at [www.maytag.com.tw](http://www.maytag.com.tw).

If you experience	Possible Causes	Solution
<b>Washer not performing as expected (cont.)</b>		
Washer won't run or fill; washer stops working (cont.)	Normal washer operation.	Door must be completely closed and latched for washer to run.
		Washer will pause during certain phases of cycle. Do not interrupt cycle.
		The washer pauses for about 2 minutes during certain cycles. Allow the cycle to continue. Some cycles feature periods of tumbling and soak.
		Washer may be stopped to reduce suds. Use only a proper amount of HE detergent.
		Cold Wash uses less water in the beginning of the cycle to provide a high concentration of detergent for optimal cleaning action. Following this concentrated tumbling, more water is used to complete the wash.
		<b>Steam Models only:</b> During the first 20 minutes of the Clean Washer with affresh cycle, it will activate the steamer but the drum will not spin or fill with water. You may see condensation on the door glass during this initial phase. If you are using an affresh Washer Cleaner tablet, it will not dissolve completely during the steam phase. This is normal.
	The washer door is not firmly shut.	The door must be closed during operation.
	Washer not loaded as recommended.	Remove several items and rearrange load evenly in washer drum. Close door, then touch and hold START.
		Do not add more than 1 or 2 additional items after cycle has started to avoid tightly packing or unbalancing.
		Do not add more water to the washer.
Not using HE detergent or using too much HE detergent.	Only use HE detergent. Suds from regular detergents can slow or stop the washer. Always measure detergent, following manufacturer's directions based on your load requirements.	
	To remove suds, cancel cycle. Select DRAIN & SPIN with Extra Rinse. Touch START. Do not add more detergent.	
Door not opened between cycles.	After any wash cycle is completed, the door must be opened and then closed before a new cycle can begin.	
Washer not draining/spinning; loads are still wet	Drain hose extends into standpipe farther than 4.5" (114 mm).	Check drain hose for proper installation. Use drain hose form and securely attach to drainpipe or tub. Do not tape over drain opening.
	The drain hose is clogged or the end of the drain hose is more than 96" (2.4 m) above the floor.	Lower drain hose if the end is higher than 96" (2.4 m) above the floor. Remove any clogs from drain hose. See "Installation Requirements" in Installation Instructions.
	Strainer/nylon stocking on end of drain hose.	Remove strainer/nylon stocking from drain hose.
	The drain hose fits too tightly in the standpipe or it is taped to the standpipe.	The drain hose should be loose, yet fit securely. Do not seal the drain hose with tape. The hose needs an air gap. See "Secure the Drain Hose" in Installation Instructions.

# TROUBLESHOOTING

First try the solutions suggested here or visit our website at [www.maytag.com.tw](http://www.maytag.com.tw).

If you experience	Possible Causes	Solution
<b>Washer not performing as expected (cont.)</b>		
Washer not draining/spinning; loads are still wet (cont.)	Using cycles with a slower spin speed.	Cycles with slower spin speeds remove less water than cycles with fast spin speeds. Use the recommended cycle/speed spin for your garment.
	Washer not loaded as recommended.	A tightly packed or unbalanced load may not allow the washer to spin correctly, leaving the load wetter than normal. See "Cycle Guide" for load size recommendation for each cycle.
	The load may be out of balance.	Avoid washing single items. Balance a single item, such as a rug or jeans jacket, with a few extra items.
	Not using HE detergent or using too much HE detergent.	Use only HE detergent. Suds from regular detergent or using too much detergent can slow or stop draining or spinning. Always measure and follow manufacturer's directions for your load. To remove extra suds, select DRAIN & SPIN with Extra Rinse. Do not add detergent.
	Small items may have been caught in the pump or stuck between the washer drum and the outer tub.	Check the drum for any items sticking through the drum holes. Empty pockets and use garment bags when washing small items.
	There are too many clothes in the Overnight Wash & Dry cycle.	Only use the Overnight Wash & Dry cycle for 2-4 lightly soiled synthetic garments, athletic uniforms, or workout wear.
Door locked at end of wash cycle	Water remaining in washer after cycle.	Select DRAIN & SPIN to remove any water remaining in the washer. The washer door will unlock at the end of the drain.
	Fresh Hold/Fresh Spin option is ON.	While this option is ON, the fan blows and the load is tumbled periodically for up to 12 hours. The door remains locked during this time. To unlock the door, cancel the Fresh Hold/Fresh Spin option by touching POWER.
Door will not unlock	Door locks when cycle has started.	If the "Add Garment" light is lit, touch START once. The door will unlock.
Incorrect or wrong wash or rinse temperatures	Check for proper water supply.	Make sure hot and cold inlet hoses are not reversed.
		Both hoses must be attached to both washer and faucet, and have both hot and cold water flowing to inlet valve.
		Check that inlet valve screens are not clogged.
	Remove any kinks in hoses.	
Washing many loads.	Your hot water tank may not have enough hot water to keep up with the number of hot or warm washes. This is normal.	
Desired setting or option does not light	For best performance, not all settings are available with each cycle and some options cannot be used together.	See the "Cycle Guide" for the available settings and options for each cycle.
Load not rinsed	Check for proper water supply.	Make sure hot and cold inlet hoses are not reversed.
		Both hoses must be attached and have water flowing to the inlet valve.
		Both hot and cold water faucets must be on.
		Inlet valve screens on washer may be clogged.
		Remove any kinks in the inlet hose.
	Not using HE detergent or using too much HE detergent.	The suds from non-HE detergent can cause the washer to operate incorrectly. Use only HE detergent. Always measure detergent and follow manufacturer's directions based on load size and soil level.



# TROUBLESHOOTING

First try the solutions suggested here or visit our website at [www.maytag.com.tw](http://www.maytag.com.tw).

If you experience	Possible Causes	Solution
<b>Washer not performing as expected (cont.)</b>		
Load not rinsed (cont.)	Washer not loaded as recommended.	<p>Avoid tightly packing the washer. The washer will not rinse well if tightly packed. Load with dry items only. See the "Cycle Guide" for load size recommendations for each cycle.</p> <p>Use cycle designed for the fabrics being washed.</p> <p>Add only 1 or 2 garments after washer has started.</p>
	The load may be out of balance.	When load unbalance occurs, a washing process will start to redistribute the load. This may lengthen the cycle time. Avoid washing single items. Balance a single item, such as a rug or jeans jacket, with a few extra items.
Load is wrinkled, twisted, or tangled	Washer not loaded as recommended.	<p>Add load loosely. Items need to move freely to reduce wrinkling and tangling. See the "Cycle Guide" for load size recommendations for each cycle.</p> <p>Reduce tangling by mixing types of load items. Use the recommended cycle for the type of garments being washed.</p>
	Wash action too long for load.	Select a lower soil level. Note that items will not be cleaned as deeply as when using a higher soil level.
	Spin speed too fast for load.	Select a slower spin speed. Note that items will be wetter than when using a faster speed spin.
	The washer is not unloaded promptly.	Unload the washer as soon as it stops or use Fresh Hold/Fresh Spin option if you will not be able to unload the washer at the end of the cycle.
	Not choosing the right cycle for the load being washed.	Use the Delicates cycle or another cycle with a slow spin speed to reduce wrinkling.
	The wash water was not warm enough to relax wrinkles.	If safe for load, use warm or hot wash water.
Not cleaning or removing stains	Washer not loaded as recommended.	<p>Add load loosely. Items need to move freely for best cleaning. See the "Cycle Guide" for load size recommendations for each cycle.</p> <p>Add only 1 or 2 garments after washer has started.</p>
	Not using HE detergent or using too much HE detergent.	Use only HE detergent. Always measure detergent and follow manufacturer's directions based on load size and soil level.
	Hard water or high level of iron (rust) in water.	You may need to install a water softener and/or iron filter.
	Fabric softener dispensing ball used.	Dispensing balls will not operate correctly with this washer. Add liquid fabric softener to the fabric softener compartment.
	Powdered detergent used for slow-speed cycle.	Consider using liquid detergent.

# TROUBLESHOOTING

First try the solutions suggested here or visit our website at [www.maytag.com.tw](http://www.maytag.com.tw).

If you experience	Possible Causes	Solution
<b>Washer not performing as expected (cont.)</b>		
Not cleaning or removing stains (cont.)	Not using correct cycle for fabric type.	Use a higher soil level setting and warmer wash temperature to improve cleaning.
		If using the Overnight Wash & Dry or Rapid Wash cycles, wash only a few items.
		Use Power Wash for tough cleaning.
		Add an extra rinse for heavily soiled loads.
	Not using dispensers.	Use dispensers to avoid chlorine bleach and fabric softener staining.
		Load dispensers before starting a cycle.
		Avoid overfilling.
		Do not add products other than those specified directly to load.
Dispense cartridge is empty.	Fill dispense cartridge to the Max line with HE liquid detergent.	
Not washing like colors together.	Wash like colors together and remove promptly after the cycle is complete to avoid dye transfer.	
Hard water or not enough detergent used.	Use more detergent for washing heavy soils in cold or hard water.	
	Touch WATER HARDNESS (on some models) to change water hardness to "hard."	
Odors	Monthly maintenance not done as recommended.	Run the Clean Washer with affresh cycle monthly or every 30 wash cycles. See "Washer Care" in "Washer Maintenance."
		Unload washer as soon as cycle is complete. Use the Fresh Hold/Fresh Spin option if load cannot be removed immediately after the wash is complete.
	Not using HE detergent or using too much HE detergent.	Use only HE detergent. Be sure to measure correctly. Always follow the manufacturer's directions. See "Washer Care" section.
	Door not left open after use.	This washer has a tight seal to avoid water leaks. To avoid odors, leave the door open to allow the washer to dry between uses.
Fabric damage	Sharp items were in pockets during wash cycle.	Empty pockets, zip zippers, and snap or hook fasteners before washing to avoid snags and tears.
	Strings and straps could have tangled.	Tie all strings and straps before starting wash load.
	Items may have been damaged before washing.	Mend rips and broken threads in seams before washing.
	Fabric damage can occur if washer is tightly packed.	Avoid tightly packing the washer. Load with dry items only.
		Use cycle designed for the fabrics being washed.
		Add only 1 or 2 garments after washer has started.
	Fabric damage can occur if washer door is closed on an item, trapping it between the door glass and the rubber seal.	Do not overfill the washer.
		Push wash load fully into the washer.
Liquid chlorine bleach may have been added incorrectly.	Do not pour liquid chlorine bleach directly onto load. Wipe up bleach spills.	
	Undiluted bleach will damage fabrics. Do not use more than recommended by manufacturer.	

# TROUBLESHOOTING

First try the solutions suggested here or visit our website at [www.maytag.com.tw](http://www.maytag.com.tw).

If you experience	Possible Causes	Solution
<b>Washer not performing as expected (cont.)</b>		
Gray whites, dingy colors	Load not sorted properly.	The transfer of dye can occur when mixing whites and colors in a load. Sort dark clothes from whites and lights.
	Wash temperatures too low.	Use hot or warm temperatures if safe for the load. Make sure your hot water system is adequate to provide a hot water wash.
	Hard water or not enough detergent used.	Use more detergent for washing heavy soils in cold or hard water.
		Touch WATER HARDNESS (on some models) to change water hardness to "hard."
Incorrect dispenser operation	Clogged dispensers or laundry products dispensing too soon.	Do not overfill dispenser. Overfilling causes immediate dispensing.
		Load dispensers before starting a cycle.
		Homes with low water pressure may result in residual powder in the dispenser. To avoid, select a warmer wash temperature if possible, depending on your load.
	Liquid chlorine bleach not used in bleach compartment.	Use only liquid chlorine bleach in the bleach compartment.
	Water in dispenser after cycle has finished.	It is normal for small amounts of water to remain in dispenser at the end of the cycle.
Single-dose laundry packet not dissolving	Adding laundry packet incorrectly.	Be sure laundry packet is added to washer drum before adding clothes. Do not add packet to dispenser. Follow the manufacturer's instructions to avoid damage to your garments.
Cycle time changes or cycle time too long	Normal washer operation.	The cycle times vary automatically based on your water pressure, water temperature, detergent, and clothes load. The options you select will also affect the cycle times.
	Excessive suds in washer.	When excessive suds are detected, a special suds routine automatically starts to remove extra suds and ensure proper rinsing of your garments. This routine will add time to the original cycle.
	Load may be out of balance.	When load unbalance occurs, a washing process will start to redistribute the load. This extends the cycle time. Avoid washing single items. Balance a single item such as a rug or jeans jacket with a few extra items.
	Not using correct cycle for load type.	The Rapid Wash cycle is designed for smaller load sizes (2-4 items) of lightly soiled garments. If larger loads are washed in this cycle, cycle time will be increased.
When using the Rapid Wash or Delicates cycle, you should wash small loads. This ensures a gentle wash for your garments without increasing cycle time.		
The controls are not responding	Control Lock is ON.	Touch and hold CONTROL LOCK for 3 seconds to turn off Control Lock. For each second CONTROL LOCK is held down, the display will count down one second, you will see "3," then "2," then "1."
Liquid detergent on door glass prior to beginning of cycle	Detergent is free to flow from the single-dose dispenser.	Do not add liquid detergent until laundry is loaded.

## ASSISTANCE AND SERVICE

Before calling for assistance or service, please check the "Troubleshooting" section. It may help you save the cost of a service call. If you still need help, please follow the instructions below:

Before calling, please know the purchase date and the complete model and serial number of the washer.

This information can help us to better respond to your request.

### **If you need replacement parts**

If you need to order replacement parts, we recommend that you only use factory-specified parts. These parts fit right and work right because they are manufactured to the same precise standards used to make each new Maytag product.

### **To locate original factory-specified parts in your area:**

Please directly contact the dealer who sold the washer, or contact Whirlpool company.

---

## IMPORTER INFORMATION

### **WHIRLPOOL (TAIWAN) CO., LTD.**

Customer Service toll free helpline: **0800 258 558**

Customer Service e-mail: [service\\_tw@whirlpool.com](mailto:service_tw@whirlpool.com)

Website: [www.maytag.com.tw](http://www.maytag.com.tw)